

 


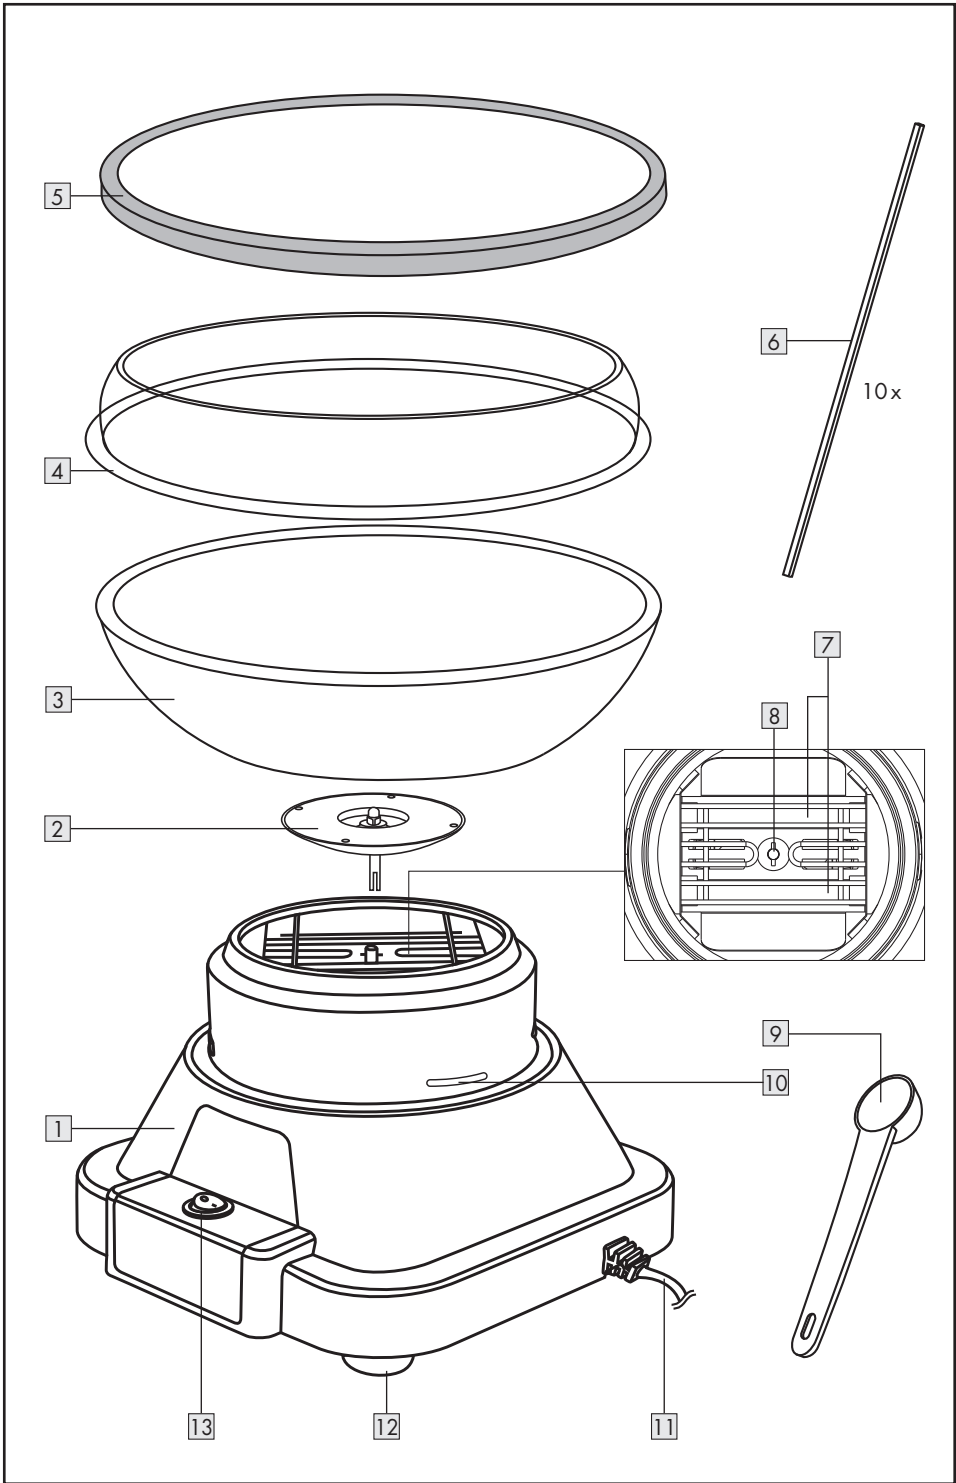 
## CANDYFLOSS MACHINE SZM 500 B1

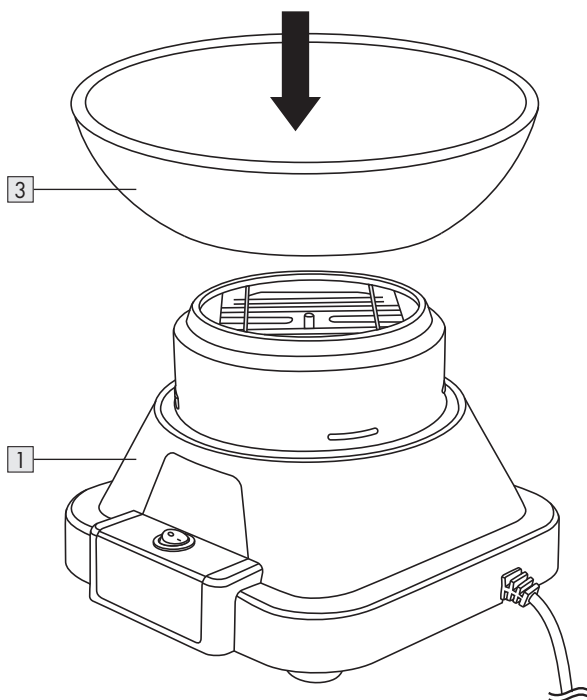 
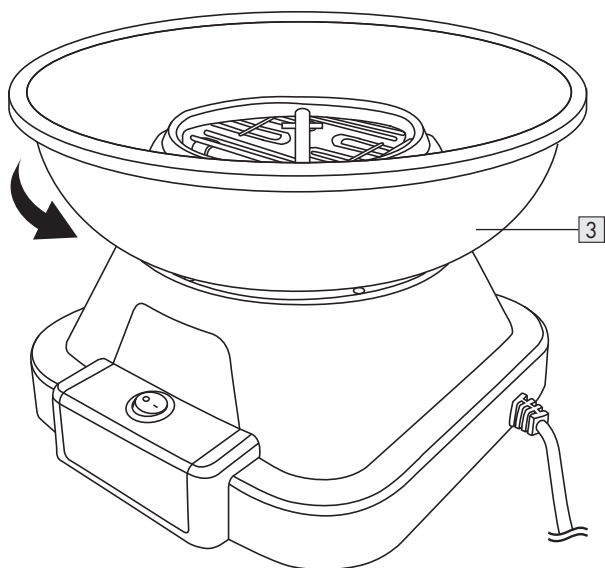 
GB IE NI

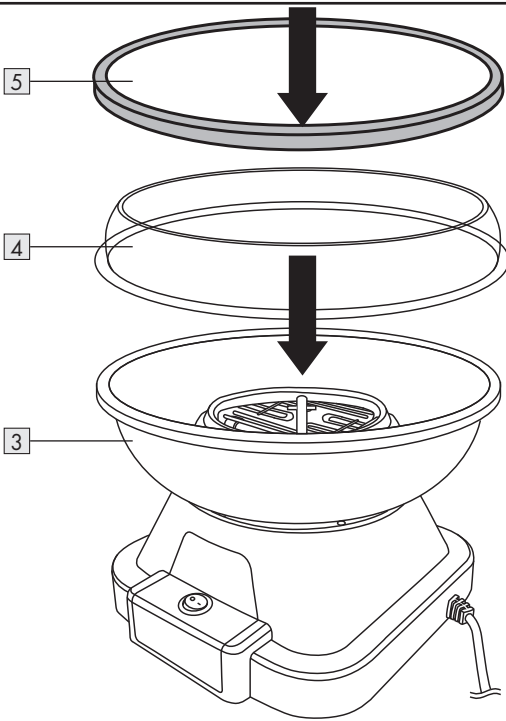 
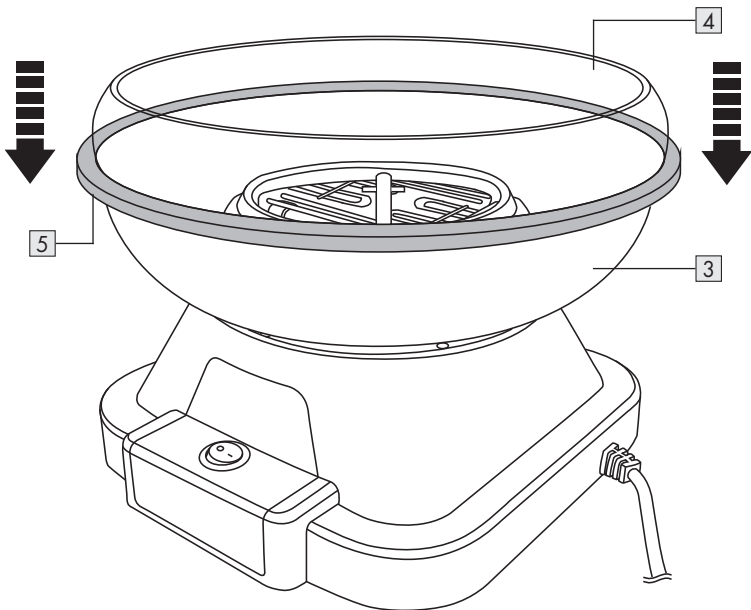 
### CANDYFLOSS MACHINE

Operation and safety notes

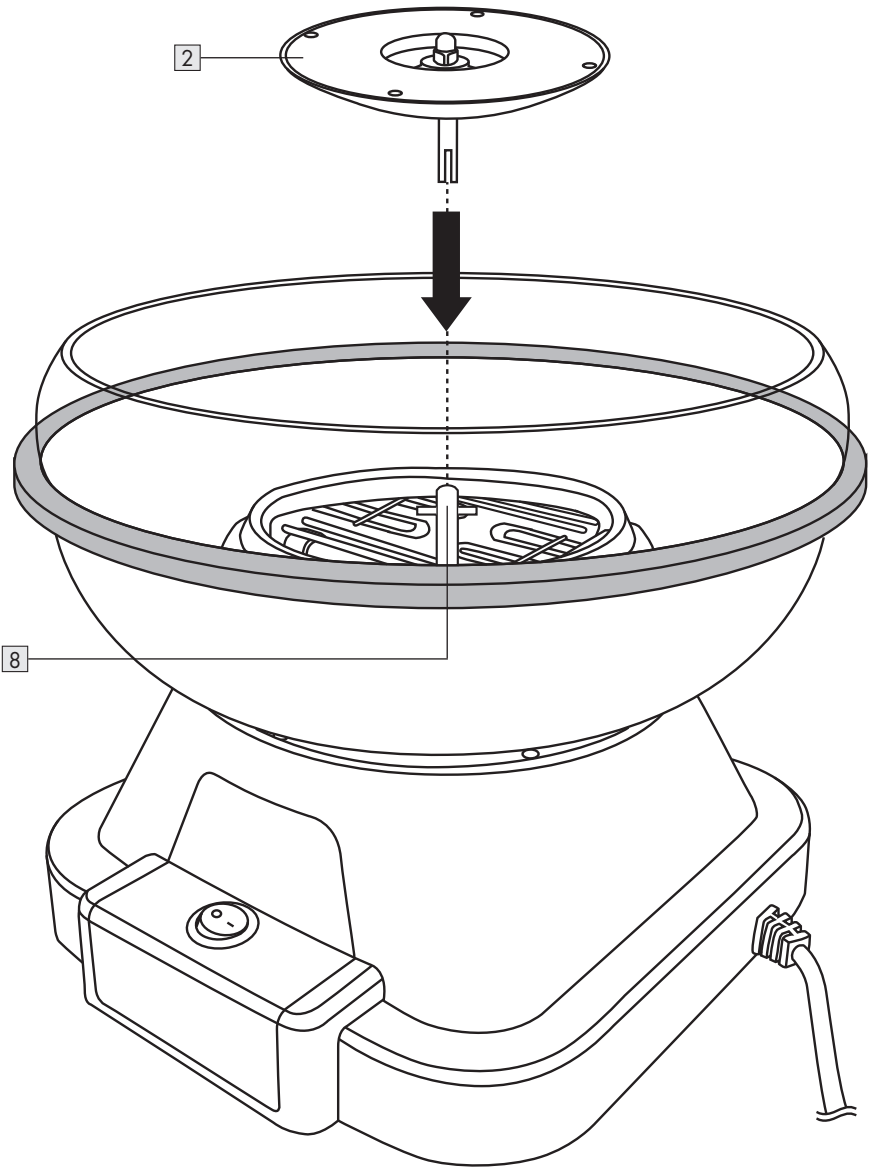 




**A****B**

**C****D**










 
**E**



<b>Warning remarks and symbols used</b> .....	Page 6
<b>Introduction</b> .....	Page 6
Intended use .....	Page 6
Scope of delivery .....	Page 7
Description of parts .....	Page 7
Technical data .....	Page 7
<b>Safety instructions</b> .....	Page 7
<b>Before use</b> .....	Page 11
Unpacking .....	Page 11
Assembly .....	Page 11
<b>Operation</b> .....	Page 11
After use .....	Page 11
Thermal cutoff .....	Page 12
<b>Recipe for colourful candy sugar</b> .....	Page 12
<b>Troubleshooting</b> .....	Page 12
<b>Cleaning and care</b> .....	Page 13
Dismantling the product .....	Page 13
Cleaning the base .....	Page 13
Cleaning the sugar container .....	Page 13
Cleaning the bowl accessories .....	Page 13
<b>Storage</b> .....	Page 13
<b>Disposal</b> .....	Page 13
<b>Warranty</b> .....	Page 14

## Warning remarks and symbols used

The following warnings are used in this manual:

	<b>DANGER!</b> This symbol with the signal word "Danger" indicates a hazard with a high level of risk which, if not avoided, will result in serious injury or death.		<b>CAUTION!</b> This symbol with the signal word "Caution" indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
	<b>WARNING!</b> This symbol with the signal word "Warning" indicates a hazard with a medium level of risk which, if not avoided, could result in serious injury or death.		<b>NOTE:</b> This symbol with the signal word "Note" provides additional useful information.
	<b>CAUTION!</b> Hot surface!		Risk of fire!
	Only use the product in dry indoor rooms.		<b>Food-safe!</b> This product has no adverse effect on taste or smell.
	Alternating current/voltage	<b>Hz</b>	Hertz
<b>W</b>	Watts		The bowl, splash guard, locking ring and the measuring spoon are dishwasher safe.
<b>CE</b>	CE mark indicates conformity with relevant EU directives applicable for this product.	<b>UK CA</b>	UKCA mark indicates conformity with relevant Great Britain regulations applicable for this product. (The UKCA mark logo is valid in Great Britain only.)

## CANDYFLOSS MACHINE

### ● Introduction

We congratulate you on the purchase of your new product. You have chosen a high quality product. The instructions for use are part of the product. They contain important information concerning safety, use and disposal. Before using the product, please familiarise yourself with all of the safety information and instructions for use. Only use the product as described and for the specified applications. If you pass the product on to anyone else, please ensure that you also pass on all the documentation with it.

### ● Intended use

This product is intended to make candy floss. This product is not suitable for commercial use. Any other use not mentioned in these instructions may cause a damage to the product or create a serious risk of injury. The manufacturer accepts no liability for damages caused by improper use.

## ● Scope of delivery

After unpacking the product, check if the delivery is complete and if all parts are in good condition. Remove all packing materials before use.

- 1 Base unit
- 1 Splash guard
- 1 Sugar container
- 1 Locking ring
- 1 Bowl
- 1 Measuring spoon
- 10 Bamboo sticks
- 1 instruction manual

## ● Description of parts

Before reading, unfold the page containing the illustrations and familiarise yourself with all functions of the product.

- 1 Base unit
- 2 Sugar container
- 3 Bowl
- 4 Splash guard
- 5 Locking ring
- 6 Bamboo sticks
- 7 Heating element
- 8 Drive shaft
- 9 Measuring spoon
- 10 Base locks
- 11 Power cord with power plug
- 12 Suction cups
- 13 On/off switch (O/I)

## ● Technical data

Input voltage	220–240 V~, 50/60 Hz
Power consumption	500 W



## Safety instructions

**BEFORE USING THE PRODUCT, FAMILIARISE YOURSELF WITH ALL OF THE SAFETY INFORMATION AND INSTRUCTIONS FOR USE! WHEN PASSING THIS PRODUCT ON TO OTHERS, ALSO INCLUDE ALL THE DOCUMENTS!**

In the case of damage resulting from non-compliance with this instruction manual the warranty claim becomes invalid!

No liability is accepted for consequential damage! In the case of material damage or personal injury caused by incorrect handling or non-compliance with the safety instructions, no liability is accepted!

**⚠ WARNING!** Misuse may lead to injury. Use this product solely in accordance with these instructions. Do not attempt to modify the product in any way.



**⚠ WARNING! DANGER OF DEATH AND ACCIDENTS FOR TODDLERS AND CHILDREN!**

Never leave children unsupervised with the packaging material. The packaging material represents a danger of suffocation. Children frequently underestimate the dangers. Always keep children away from the packaging material.

**⚠ DANGER! Risk of burns!** Do not touch the product while in use. During use the product becomes hot.

**⚠ DANGER! Fire hazard!** The product should not come into contact or be covered with easily flammable materials, like curtains, textiles and the like. Always ensure sufficient safety distance to flammable materials.

**⚠ DANGER! Risk of electric shock!** Do not attempt to repair the product yourself. In case of malfunction, repairs are to be conducted by qualified personnel only.

**⚠ WARNING! Risk of electric shock!** Do not immerse the electrical parts of the product in water or other liquids. Never hold the product under running water.

**⚠ CAUTION! Risk of electric shock!** Never use a damaged product. Disconnect the product from the power supply and contact your retailer if it is damaged.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This product can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved. Children shall not play with the product. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the product and its power cord out of reach of children less than 8 years.
- Before connecting the product to the power supply, check that the voltage and current rating corresponds with the power supply details shown on the product rating label.
- To avoid damaging the power cord, do not squeeze, bend or chafe it on sharp edges. Keep it away from hot surfaces and open flames as well.
- Lay out the power cord in such a way that no unintentional pulling or tripping over is possible.
- Do not use the product with wet hands or while standing on a wet floor. Do not touch the power plug with wet hands.
- The product is not intended to be operated by means of an external timer or separate remote-control system.
- Make sure all the parts of the product are completely dry before operating the product.
- Should the product fall into water, unplug the power plug first before reaching into the water.

- Do not open the product's casing under any circumstances. Do not insert any foreign objects into the inside of the product.
  - Do not pull the power plug out of the electrical outlet by the power cord and do not wrap the power cord around the product. Connect the power plug to an easily reachable electrical outlet so that in case of an emergency the product can be unplugged immediately.
  - Do not touch the moving parts. Keep fingers, hair, clothing and utensils away from all moving parts.
  - Always disconnect the product from the supply if it is left unattended and before assembling, disassembling or cleaning.
  - Make sure that the location planned for the usage of the product is well ventilated.
  - Place the product on heat-resistant surfaces only. Do not place on carpets, bedding, towels etc.
  - Should unusual noise, smell, smoke or other malfunctions arise during use, switch the product off and unplug it from the power socket.
- ⚠ CAUTION! Risk of injury!**
- Ensure that it is not possible for anyone to trip over or to get caught up in or step on the power cord.
  - The sugar container 2 becomes very hot and rotates very quickly. Do not touch the sugar container 2 with parts of your body or with other items while the product is working or cooling down.
  - Switch off the product and disconnect from supply before changing accessories or approaching parts that move in use.
  - No action is needed from users to shift the product between 50 and 60 Hz. The product adapts itself for both 50 and 60 Hz.

## ● **Before use**

## ● **Unpacking**

- Remove the packaging. Check if all parts are complete.
- Clean the product before first use (see “Cleaning and care”). Dry all parts thoroughly.

## ● **Assembly**

### **Fig. Step**

Place the base unit [1] on a stable flat ground. Avoid rugged surfaces to let the suction cups [12] secure the base unit [1] position.

**A** Place the bowl [3] onto the base unit [1].

**B** Turn the bowl [3] counter-clockwise until it is secured in place.

**C** Place the splash guard [4] on the bowl [3].

**D** Align the edges of the splash guard [4] and the bowl [3]. Secure both parts together with the locking ring [5].

Place the sugar container [2] on the drive shaft [8].

**E** **i** **NOTE:** The cross pin on the drive shaft [8] must fit into the indentation on the bottom pin of the sugar container [2].

## ● **Operation**

- Connect the power plug [11] to a suitable socket-outlet.
- Switching on: Set the on/off switch [13] to **I**.
- Allow the product to run for about 5 minutes to reach the operational temperature.
- Switching off: Set the on/off switch [13] to **O**.
- Wait until the sugar container [2] stops turning.
- Place approximately 14 g sugar (not included) into the middle section of the sugar container [2] by using the measuring spoon [9].

### **i** **NOTES:**

- To achieve the best results, use white granulated sugar.
- Only add 1 scoop of sugar (not included) by the measuring spoon [9] at a time to avoid overfilling and spilling the sugar out.
- Do not use the product for longer than 15 minutes without stopping. The product could overheat and be damaged. Switch off the product and allow it to cool down for at least 15 minutes.
- Set the on/off switch [13] to **I**.
- After a short while sugar strands will start to form around the inner edge of the bowl [3].
- Guide the bamboo stick [6] in circles around the bowl [3]. While doing so, turn the bamboo stick [6] in your fingers.
- As soon as the sugar strand adheres to the bamboo stick [6], lift the bamboo stick [6] above the bowl [3] area.
- Hold the bamboo stick [6] horizontally right above the bowl [3] while turning it in your fingers continuously.
- Slowly move the bamboo stick [6] around the edge of the bowl [3] to keep collecting all the sugar strands.
- The sugar is used up when no more strands appear.
- If you want to prepare more candy floss, switch the product off. Refill the sugar container [2].

## ● **After use**

- Switching off: Set the on/off switch [13] to **O**.
- Wait until the product cools down.
- Clean the product thoroughly.

**i** **NOTE:** Clean the product after every use, otherwise the sugar residues may cause defects in operation.

## ● Thermal cutoff

The product is equipped with a thermal cutoff sensor. If the temperature gets too high and there is a risk of damage the product switches off automatically. Once that happens, take the following measures:

- Disconnect the power plug **11** from the socket-outlet immediately.
- Have the product checked by qualified personnel.

## ● Recipe for colourful candy sugar

### Ingredients:

100 g            White granulated sugar  
6–8 drops      Gel food colouring

### Preparation:

- Put the white granulated sugar in a small food and freezer bag.
- Add 6 to 8 drops of gel food colouring.
- Squeeze the air out from the bag as much as possible. Close the bag properly.
- From outside of the bag, rub the gel food colouring into the sugar until the sugar is evenly coloured.

① **NOTE:** Add gel food colouring until the desired colour has been achieved.

- The coloured candy sugar is now ready to be used for making candyfloss (see “Operation”).

## ● Troubleshooting

Problem	Cause/Solution
Water entered the base unit <b>1</b> .	<ul style="list-style-type: none"><li>■ Disconnect the power plug <b>11</b> from the socket-outlet.</li><li>■ Flip the base <b>1</b> over and leave it to drain.</li><li>■ Have the product checked by a qualified personnel.</li></ul>
Sugar entered the base unit <b>1</b> .	<ul style="list-style-type: none"><li>■ Disconnect the power plug <b>11</b> from the socket-outlet.</li><li>■ Allow the product to cool down.</li><li>■ Remove the sugar container <b>2</b> from the drive shaft <b>8</b>.</li><li>■ Flip the base <b>1</b> over. Gently shake the product letting the sugar trickle out.</li></ul>
The sugar container <b>2</b> is not turning.	<ul style="list-style-type: none"><li>■ Check if the sugar container <b>2</b> is placed correctly (see “Assembly”).</li></ul>
No sugar strands are forming.	<ul style="list-style-type: none"><li>■ The sugar container <b>2</b> might be jammed. Clean the container thoroughly.</li></ul>
The product suddenly stops working.	<ul style="list-style-type: none"><li>■ The product was in operation for too long activating the thermal cutoff (see “Thermal cutoff”).</li><li>■ Disconnect the power plug <b>11</b> from the socket-outlet. Have the product checked by qualified personnel.</li></ul>

## ● Cleaning and care

- Before cleaning, disconnect the product from the socket-outlet.
- ⚠ **WARNING!** Do not immerse the electrical parts of the product in water or other liquids. Never hold the product under running water.
- Clean the product with a slightly moistened cloth.
- Do not allow any water or other liquids enter the product's interior.
- Do not use abrasives, harsh cleaning solutions or hard brushes for cleaning.
- Let all parts dry afterwards.

## ● Dismantling the product

- Remove the power plug **11** from the power socket.
- Dismantle the splash guard **4** and the sugar container **2**.
- Turn the bowl **3** clockwise. Lift the bowl **3** up.

## ● Cleaning the base

- Clean the base unit **1** with a damp cloth.
- Wipe dry with a non-abrasive cloth.

## ● Cleaning the sugar container

- ① **NOTE:** The sugar container **2** is not dishwasher safe. Do not clean it in the dishwasher.
- Clean the sugar container **2** in warm water using your hands.
- Let the sugar container **2** dry thoroughly before using the product again.

## ● Cleaning the bowl accessories

- ① **NOTE:** Only the bowl **3**, splash guard **4**, locking ring **5** and the measuring spoon **9** are dishwasher safe.

## ● Storage

- Do not cover the product while it is in use or shortly after use, when it is still hot. Let the product cool completely before storing.
- When not in use, store the product in its original packaging.
- Store the product in a dry, secure location away from children.

## ● Disposal

The packaging is made entirely of recyclable materials, which you may dispose of at local recycling facilities.



Observe the marking of the packaging materials for waste separation, which are marked with abbreviations (a) and numbers (b) with following meaning: 1-7: plastics / 20-22: paper and fibreboard / 80-98: composite materials.



The product and packaging materials are recyclable, dispose of it separately for better waste treatment.

The Triman logo is valid in France only.



Contact your local refuse disposal authority for more details of how to dispose of your worn-out product.



To help protect the environment, please dispose of the product properly when it has reached the end of its useful life and not in the household waste. Information on collection points and their opening hours can be obtained from your local authority.

## ● **Warranty**

The product has been manufactured to strict quality guidelines and meticulously examined before delivery. In the event of product defects you have legal rights against the retailer of this product. Your legal rights are not limited in any way by our warranty detailed below.

The warranty for this product is 3 years from the date of purchase. The warranty period begins on the date of purchase. Please keep the original sales receipt in a safe location. This document is required as your proof of purchase.

Should this product show any fault in materials or manufacture within 3 years from the date of purchase, we will repair or replace it – at our choice – free of charge to you. This warranty becomes void if the product has been damaged, or used or maintained improperly.

The warranty applies to defects in material or manufacture. This warranty does not cover product parts subject to normal wear, thus possibly considered consumables (e.g. batteries) or for damage to fragile parts, e.g. switches, rechargeable batteries or glass parts.

## **Warranty claim procedure**

To ensure quick processing of your case, please observe the following instructions:

Please have the till receipt and the item number (IAN 375586\_2104) available as proof of purchase.

You will find the item number on the rating plate, an engraving, on the front page of the instructions for use (bottom left), or as a sticker on the rear or bottom of the product.

If functional or other defects occur, please contact the service department listed either by telephone or by e-mail.

You can return a defective product to us free of charge to the service address that will be provided to you. Ensure that you enclose the proof of purchase (till receipt) and information about what the defect is and when it occurred.

### **Service**

#### **(GB) Service Great Britain**

Tel.: 08000569216

E-Mail: [owim@lidl.co.uk](mailto:owim@lidl.co.uk)

#### **(IE) Service Ireland**

Tel.: 1800 200736

#### **(NI) Service Northern Ireland**

Tel.: 0800 0927852

E-Mail: [owim@lidl.ie](mailto:owim@lidl.ie)



**OWIM GmbH & Co. KG**

Stiftsbergstraße 1  
74167 Neckarsulm  
GERMANY

Model No.: HG04792-BS  
Version: 11/2021

IAN 375586\_2104

