

SILVER CREST®



www.lidl-service.com



BLUETOOTH® HEADPHONES SKBT 3 A1

GB IE NI CY

BLUETOOTH® HEADPHONES

Operating instructions






IAN 297459



GB IE NI CY

     Contents



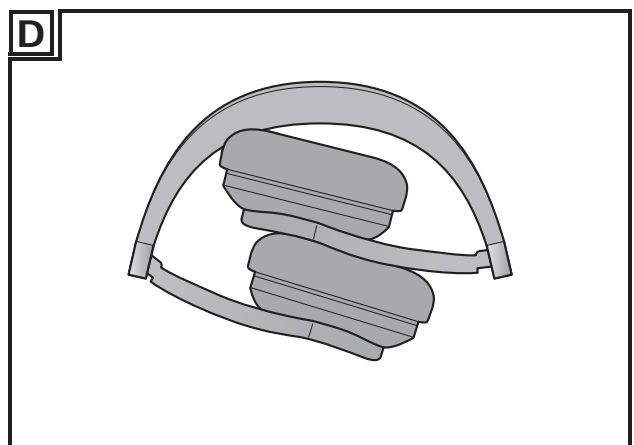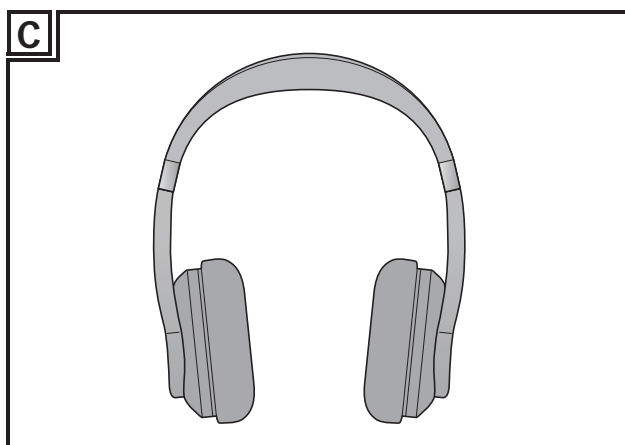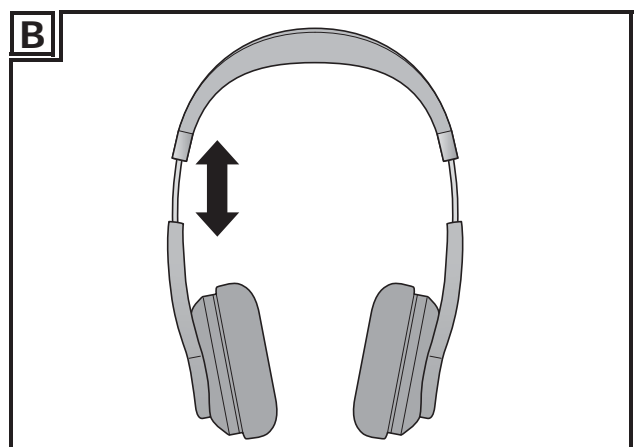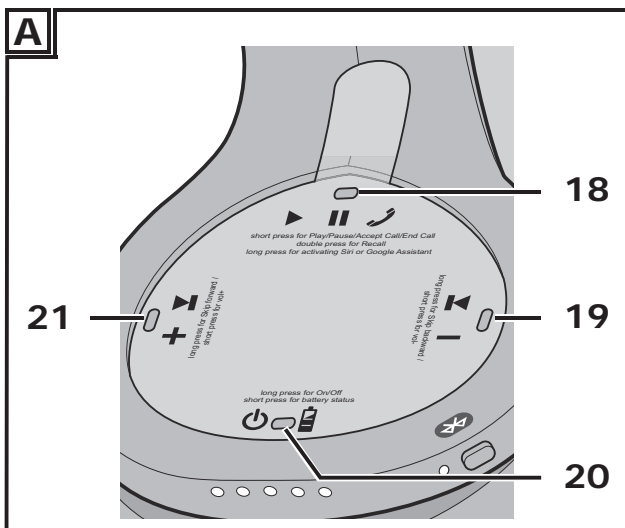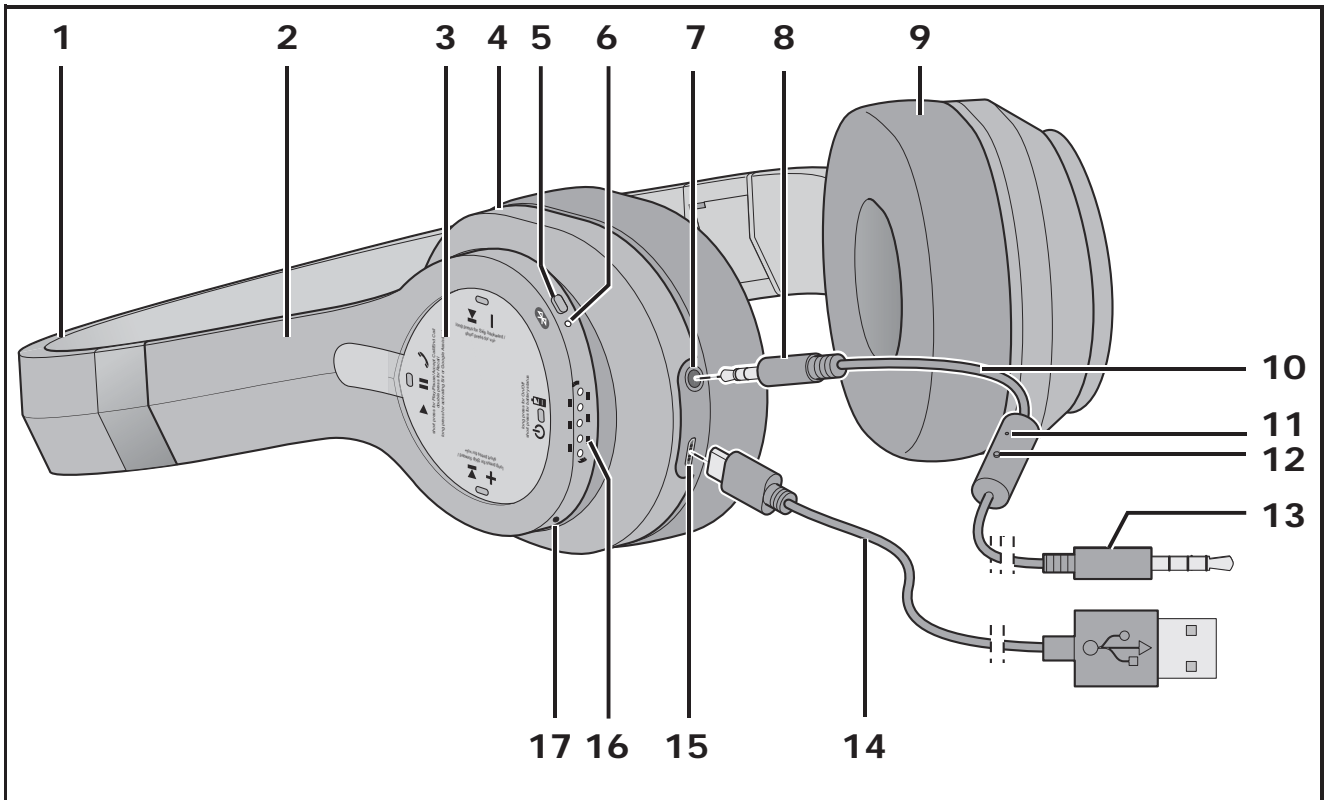

1. Overview	3
2. Intended purpose	5
3. Safety instructions	5
4. Items supplied	7
5. Before using for the first time	8
5.1 Charging the battery	8
5.2 Functions of the buttons	9
5.3 Establishing a Bluetooth connection	9
5.4 Calls via Bluetooth	10
5.5 Interruption of the connection	10
5.6 Playing music back using the cable	10
5.7 Calls via cable	11
5.8 Put on the headphones	11
6. Transport	11
7. Cleaning	11
8. Storing	11
9. Disposal	11
10. Troubleshooting	12
11. Technical specifications	12
12. Warranty of the HOYER Handel GmbH	13

1. Overview



1		Headset
2		Handle of the headphone earcups (for adjusting the size)
3		Keypad, with sticker stuck on to be pulled off (short description of the buttons)
4	L	Left headphone earcup, adjustable and folding
5		Pairing button
6		Bluetooth® LED
7		3.5 mm jack socket
8		3.5 mm jack, 3-pole
9	R	Right headphone earcup, adjustable and folding
10		3.5 mm jack cable
11		Jack cable microphone
12		Multifunction button: pick up / end / reject a call Start language assistant on the connected smartphone
13		3.5 mm jack, 4-pole
14		USB charger cable for Micro USB/type A
15		Micro USB port
16		LED charging indicator
17		Headphones microphone

Keypad Figure A

18		Pause / Play Pick up / end / reject a call / repeat a call
19		Beginning of a song / previous song Reducing the volume
20		Switching on/off / Battery: charging state and announcement of remaining runtime
21		Next song Increasing the volume

Thank you for your trust!

Congratulations to your new *Bluetooth*[®] headphones.

For safe handling of the product and in order to get to know the entire scope of features:

- **Thoroughly read these user instructions prior to initial use.**
- **Above all, observe the safety information!**
- **The device should only be used as described in these user instructions.**
- **Keep these user instructions for reference.**
- **If you pass the device on to someone else, please include this copy of the user instructions. The user instructions are a part of the product.**

We hope you enjoy your new Bluetooth headphones!

Trademarks

The *Bluetooth*[®] word mark and the Bluetooth logo are registered trademarks of Bluetooth SIG, Inc. (Special Interest Group), any use of the trademark by the Hoyer Handel GmbH is effected within the framework of a licence.

USB[®] is a registered trademark of USB Implementers Forum, Inc..

2. Intended purpose

This is an entertainment electronics device. The Bluetooth headphones are provided for the audio reproduction of audio devices via Bluetooth or the 3.5 mm jack socket. The device has a hands-free function for phone calls.

The device is designed for private home use and must not be used for commercial purposes.

The device must only be used indoors.

3. Safety instructions

Warnings

If necessary, the following warnings will be used in these user instructions:



DANGER! This symbol, in combination with the note "Danger" means a high risk. Failure to observe this warning may result in injury to life and limb.



WARNING! This symbol, in combination with the note "Warning" means a moderate risk. Failure to observe this warning may result in injury or serious material damage.

CAUTION: low risk: failure to observe this warning may result in minor injury or material damage.

NOTE: circumstances and specifics that must be observed when handling the device.



DANGER for children and people with disabilities

- ⊙ Children must not play with packing material. Children must not play with the packing material. **There is a risk of suffocation.**
- ⊙ This device is not designed to be used by people (including children) with limited physical, sensory or mental capabilities or people without adequate experience and/or understanding, unless they are supervised by someone responsible for their safety or are instructed by them on how to use the device.
- ⊙ Children must not play with the device.
- ⊙ Cleaning and maintenance by the user must not be performed by children without supervision.
- ⊙ Keep the device out of the reach of children.



DANGER to and from pets and livestock

- ⊙ Electrical devices may present a hazard to pets and livestock. In addition, animals can also cause damage to the device. For this reason you should keep animals away from electrical devices at all times.



DANGER of accidents due to impaired perception

- ⊙ Surrounding noises may sound different than usual. Never use the headphones during activities when you must be attentively aware of your surroundings, **particularly when operating machinery or vehicles in traffic. (This also applies to bicycles.)** You must also comply with the legal provisions and regulations of the country in which you are using the device.



DANGER of affecting cardiac pacemakers

- ⊙ The magnetic fields generated by the headphones may impair the functioning

of heart pacemakers and implanted defibrillators. You must therefore maintain a minimum distance of 10 cm between the headphones and the heart pacemaker / defibrillator.



WARNING! Risk of hearing damage

- ⊙ Set a low volume on the audio device before you connect the headphones to the sound source.
- ⊙ Avoid excessive volumes, particularly over extended periods or in the case of frequent use. Excessive volume can result in permanent hearing damage.



DANGER from the battery

- ⊙ The device is provided with a lithium polymer battery.
 - The battery cannot be removed.
 - This device must not be opened.
 - Completely dispose of the device.
- ⊙ Because of the high power consumption, do not charge the headphones through a laptop / PC. Only charge the headphones via a USB power unit (min. 800 mA, not included in the items supplied).
- ⊙ When using a USB power unit, the wall socket used must always be easily accessible so that, in a dangerous situation, the USB power unit can be disconnected quickly from the wall socket. Observe also the user instructions of the USB power unit.
- ⊙ Do not use the device if there is visible damage to the housing or the USB charger cable.
- ⊙ This device must not be thrown into fire. **DANGER OF EXPLOSION!**
- ⊙ The device must not be covered whilst charging the battery.
- ⊙ The device must only be charged in a dry environment.
- ⊙ Foreign bodies must not be inserted into any of the components of the headphones.

- ⊙ Do not expose the device to direct sunshine or heat. The ambient temperature should not be lower than 10 °C or higher than 40 °C. Please remember that in a car the storage temperature may significantly exceed 40 °C.
- ⊙ The battery may only be charged with the original accessory (USB charger cable).



WARNING! Risk of material damage

- ⊙ If you notice any irregularities (e.g. unusual noises, strange smells or smoke developing) turn the device off immediately and remove all cables. Do not use the device any longer.
- ⊙ If the device is moved from a cold location to a warm location, condensate may form in the device. Leave the device switched off for a few hours to become acclimatised.
- ⊙ Protect the device against damage, e.g. from:
 - drips and splashes of water
 - heat, direct sun radiation and open flames (e.g. candles)
 - impacts and similar violent effects
- ⊙ Protect the cable against damage, e.g. from:
 - sharp edges
 - hot places
 - clamping or crushing
- ⊙ Do not use any astringent or abrasive cleaning agents.
- ⊙ To avoid any risk, do not make modifications to the device. Repairs must be carried out by a specialist workshop or the Service Centre.

Notes on Bluetooth

- ⊙ Radio waves are potentially able to affect or even interfere with the operation of heart pacemakers, (sensitive) electronic devices and other radio waves (e.g. WLAN). Therefore, please observe the following notes.

- People wearing heart pacemakers should maintain a distance of 20 cm between heart pacemaker / defibrillator and the device.
- Radio waves may cause interferences, e.g. in mobile phones or hearing aids.
- Do not use the device in areas subject to explosion hazards.
- Do not use the device in the vicinity of microwave ovens or devices generating magnetic fields.

4. Items supplied

- 1 Bluetooth headphones
- 1 USB charger cable for micro USB/ Type A **14**
- 1 cable for 3.5 mm jack **10**
- 1 transport bag
- 1 copy of the quick reference guide
- 1 booklet with safety instructions and guarantee statements

- Remove all packing material.
- Check that the device is undamaged. A damaged device must never be used.

If the delivery is incomplete or defective, please contact the responsible service centre of the manufacturer (see "Warranty of the HOYER Handel GmbH" on page 13).

5. Before using for the first time



WARNING!

- ⊙ Because of the high power consumption, do not charge the headphones through a laptop / PC. Only charge the headphones via a USB power unit (min. 800 mA, not included in the items supplied).
- ⊙ The device must not be covered whilst charging the battery.
- ⊙ The device must only be charged in a dry environment.


NOTES:

- When using a USB power unit (not included in items supplied), comply with its user instructions.
- Charge the battery fully before using the device.
- The maximum battery capacity is reached after approx. 4-5 charging cycles.
- The charging time of an empty battery is approx. 2.5 hours. It is possible to play back during the charging process, however, this extends the charging time.

5.1 Charging the battery

1. Connect the micro USB plug of the USB charger cable **14** to the micro USB port **15** of the device.
2. Connect the USB A plug of the USB charger cable **14** with a USB power unit (min. 800 mA, not included in the scope of delivery). All of the LEDs **16** are lit steadily, if the battery is fully charged.

Remaining runtime of battery





- Press the button  **20** briefly with the device switched on to have the charging state of the battery ...
... displayed optically via the LEDs **16** (the fewer LEDs are lit the shorter the remaining runtime) or
... announced:

LED indication / Indication in English	Meaning
○ ○ ○ ○ ○ "Between twenty and twenty-five hours play time"	20–25 hours remaining runtime
○ ○ ○ ○ ● "Between fifteen and twenty hours play time"	15–20 hours remaining runtime
○ ○ ○ ● ● "Between ten and fif- teen hours play time"	10–15 hours remaining runtime
○ ○ ● ● ● "Between five and ten hours play time"	5–10 hours remaining runtime
○ ● ● ● ● "Between one and five hours play time"	1–5 hours remaining runtime
⚡⚡⚡⚡⚡ "Less than one hour play time"	Less than 1 hour remaining runtime
● ● ● ● ● "Recharge head- phone, power off"	Headphones switch off, charge battery

5.2 Functions of the buttons

NOTES:



- Reaching the maximum settable volume is signalled by the headphones via a double beep.
- It is possible, that not all of the functions will be supported by all mobile phones.

Button	Function
 18	while playing back: <ul style="list-style-type: none">• press briefly: pause / play• press long: activate the language assistant of the connected smartphones during a call: <ul style="list-style-type: none">• press briefly: pick up / end call• press briefly 2x: redialling• press long: reject call
 19	<ul style="list-style-type: none">• press briefly: reduce the volume• press long: beginning of a song• press 2x long: previous song
 20	<ul style="list-style-type: none">• press briefly: battery indicator / announcement of remaining runtime battery• press long: switching on/off (acoustic signal)
 21	<ul style="list-style-type: none">• press briefly: increase the volume• press long: next song

5.3 Establishing a Bluetooth connection

NOTES:

- The identification of the device is "SKBT 3 A1".
- After turning it on, the device automatically tries to reconnect to the last paired device.
- Please observe that the establishing of the connection may vary slightly depending on the device and the software used.
- The device switches off if no Bluetooth connection can be established within 10 minutes.
- If you pass the device on to someone else, in order to protect your data and your privacy, you should disconnect the Bluetooth connection to the device and delete it from the connection list on your smartphone.

1. Press the button  20 for approx. 2 seconds to switch the device on. An audio signal sounds and the LED 6 flashes. The charging indicator 16 shows briefly the charging state of the battery.
2. Switch on the audio device (e.g. smartphone) and start the Bluetooth connection.
3. The audio device will now receive the device identification "SKBT 3 A1". If nothing happens, press button  5 until the LED 6 flashes.
4. Establish a connection to the headphones on the audio device. If you are asked for a password, enter "0000". Both devices are now interconnected. The LED 6 now lights up and a beep is heard.

NOTE: usually, audio devices remember the identification of the device. In this case, it may not be necessary to establish the connection manually again if the Bluetooth function is activated.

- Now play back a music track on the audio device. The sound is played by the headphones.
- Use the **◀- 19**, **▶+ 21** and **▶||↷ 18** buttons to select and control the music track.

5.4 Calls via Bluetooth

If the device is connected to a smartphone it is possible for you to accept phone calls. The ring tone is reproduced via the headphones and the music playback is interrupted.

NOTES:

- For some mobile phones you have to choose Bluetooth as audio source when accepting a call.
- It is possible, that not all of the functions will be supported by all mobile phones.

- Press the button **▶||↷ 18** briefly to accept the call.
- Adjust the volume during the phone call using the buttons **◀- 19** and **▶+ 21**.
- Press the button **▶||↷ 18** briefly during the phone call to end the call. If you have accepted the call while the music was playing, the song will continue to be played after ending the phone call.

5.5 Interruption of the connection

The connection is interrupted if ...

- ... one of the devices is switched off;
- ... the Bluetooth function is switched off;
- ... the range (approx. 10 metres) is exceeded;
- ... you press the button **⊗ 5** until the LED **6** flashes. In this case, a new connection to another device can be established immediately.

5.6 Playing music back using the cable

NOTE: a playback via a cable, this connection has priority over the Bluetooth connection. A possibly existing Bluetooth connection will be interrupted when the jack **10** is plugged in.

Button	Function
Button 12 at the jack cable 10	<p>while playing back:</p> <ul style="list-style-type: none"> press briefly: pause / play press briefly 2x: next song press briefly 3x: previous song press long: start language assistant of a connected smartphone <p>during a call:</p> <ul style="list-style-type: none"> press briefly: pick up / end call press long: reject call

- The stereo jack cable **10** has 2 different jacks. Insert the 4-pole jack **13** into the headphone socket of the sound source (e.g. smartphone, MP3 player) and the 3-pole jack **8** into the jack socket **7** on the device.
- Switch on the audio device.
- Start playback on the audio device. The sound is reproduced via the headphones.
- Use the button **12** at the jack cable **10** to select and control the music track. The volume is controlled via the audio device.

5.7 Calls via cable

1. Briefly press the button **12** at the jack cable **10** to pick up the call.
2. Adjust the volume during the phone call via the smartphone.
3. Press the button **12** briefly during the phone call to end the call. If you have accepted the call while the music was playing, the song will continue to be played after ending the phone call.

5.8 Put on the headphones

1. Put on the headphones in such a way that the marking **R** is on the right and **L** is on the left.
2. **Figure B:** adjust the size of the headphones to your head size using the two adjustable headphone earpieces **4** and **9** by pulling out or pushing in both handles **2**.
3. Set the volume at the sound source or the headphones. Make absolutely sure that you are still able to hear the ambient noise.

6. Transport

The headphones can be folded to save space and transported with the supplied transport bag.

1. **Figures B+C:** bring the headphone earpieces **4** and **9** to the upper position by pushing in.
2. **Figure D:** fold the headphone earpieces **4** and **9** inwards into the headset **1**.

7. Cleaning



WARNING Risk of material damage!

- ⦿ Protect the device from water drops and water splashes.
- ⦿ Do not use any sharp or abrasive cleaning aids.

- If necessary, clean the device with a soft, damp cloth.

8. Storing

- When no longer using the device, store it in a place where neither high temperatures nor moisture can affect it.
- Charge the battery before storing the device away for a prolonged period. Please note that if the device is stored for too long, this may reduce the capacity of the battery. Avoid a deep discharge of the battery.

9. Disposal

The battery integrated into this device must not be disposed of in household waste. The device must be disposed of properly with the battery installed.

This product is subject to the provisions of European Directive 2012/19/EC. The symbol showing a wheelie bin



crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products identified with this symbol may not be discarded with normal household waste, but must be taken to a collection point for recycling electric and electronic appliances. Recycling helps to reduce the consumption of raw materials and protect the environment.

Packaging

When disposing of the packaging, make sure you comply with the environmental regulations applicable in your country.

10. Troubleshooting

If your headphones fail to function as required, please try this checklist first. Perhaps there is only a minor problem, and you can solve it yourself.



WARNING Risk of material damage!

- ⊙ Do not attempt to repair the device yourself under any circumstances.

Fault	Possible causes / Action
No function	<ul style="list-style-type: none"> • Is the battery empty? Has the device switched off automatically?
No Bluetooth connection	<ul style="list-style-type: none"> • Is the Bluetooth function of the audio device active? • Did you switch off the device? • Is there a plug in the jack socket 7?
Music cannot be played via Bluetooth	<ul style="list-style-type: none"> • Did you press the button ▶ ↶ 18? • Is the volume set too low? • Is there a plug in the jack socket 7?
Phone calls cannot be accepted using the button 12 on the cable.	<ul style="list-style-type: none"> • The stereo jack cable 10 has 2 different jacks. Are the jacks 8 / 13 interchanged?

11. Technical specifications

Model:	SKBT 3 A1
Resistance:	80 Ω
Broadband ID voltage (WBCV):	160 mV +/- 10%
Bluetooth:	Bluetooth v4.2 (AVRCP, HFP, A2DP)
Frequency range:	2.402 - 2.480 MHz
Transmission power:	3,9 dBm (max.)
Range:	up to 10 m
Battery:	Lithium polymer, 3,7 V, 800 mAh (3,33 Wh)
Charging voltage:	5 V
Charging current:	800 mA
Sockets:	1x micro USB 1x 3.5 mm stereo jack
Dimensions (WxDxH):	approx. 20 x 17 x 7 cm (folded out)
Weight:	approx. 210 g (without accessories)
Operation and storage conditions:	10 - 40 °C Humidity 40 to 85% relative

Symbols used

	With the CE marking, HOYER Handel GmbH declares the conformity with EU guidelines.
	This symbol reminds you to dispose of the packaging in an environmentally friendly manner.
	Recyclable materials: cardboard (except corrugated cardboard)

Subject to technical modifications.

Notes on the EU declaration of conformity

The firm HOYER Handel GmbH hereby declares that this product meets the fundamental requirements of

- the RED 2014/53/EU, as well as
- the RoHS Directive 2011/65/EU.

A complete declaration of conformity can be found on the Internet at

<http://qr.hoyerhandel.com/d/297459.2>

12. Warranty of the HOYER Handel GmbH

Dear Customer,
your device is provided with a 3 year warranty starting with the purchase date. In the event of product defects, you are entitled to statutory rights against the vendor. These statutory rights are not restricted by our warranty presented in the following.

Warranty conditions

The warranty period starts with the purchase date. Please keep the original purchase receipt in a safe place. This document is required to verify the purchase.

If within three years from the purchase date of this product a material or factory defect occurs, the product will be repaired or replaced by us – at our discretion – free of charge to you. This warranty implies that within the period of three years the defective device and the purchase receipt are presented, including a brief written description of the defect and the time it occurred.

If the defect is covered by our warranty, the repaired or a new product will be returned to you. No new warranty period starts with a repair or replacement of the product.

Warranty period and statutory claims for defects

The warranty period is not extended when the warranty has been claimed. This also applies to replaced and repaired parts. Any damages and defects already existing at the time of purchase must be reported immediately upon unpacking. Repairs arising after the expiration of the warranty period are subject to a charge.

Warranty coverage

The device was produced carefully according to strict quality guidelines and tested diligently prior to delivery.

The warranty applies to material or factory defects.

Excluded from the warranty are wear parts subject to normal wear and damages to fragile parts, e.g. switches, batteries, lamps or other parts manufactured from glass.

This warranty expires if the product is damaged, not used as intended or not serviced. For the proper operation of the product, all instructions listed in the operating instructions must be observed carefully. Any form of use and handling that is advised against in the operating instructions or warned against must always be avoided.

The product is only intended for private and not for commercial use. In the case of incorrect and improper treatment, use of force and interventions not performed by our authorised Service Centre, the warranty shall cease.

Handling in case of a warranty claim

In order to ensure prompt processing of your matter, please observe the following notes:

- Please keep the article number **IAN: 297459** and the purchase receipt as a purchase verification for all inquiries.
- The article number can be found on the rating plate, an engraving, the title page of your instructions (in the bottom left), or as a label on the rear or underside of the device.
- If faulty operation or other defects occur, first contact the Service Centre listed in the following by **telephone** or **email**.
- Then, you are able to send a product reported as defective free of charge to the service address specified to you, including the purchase receipt and the information on the defect and when it occurred.



Please visit www.lidl-service.com to download this and many other manuals, product videos and software.



Service Centre

GB Service Great Britain
Tel.: 0871 5000 720 (€ 0.10/Min.)
E-Mail: hoyer@lidl.co.uk

IE Service Ireland
Tel.: 1890 930 034
(0,08 EUR/Min., (peak))
(0,06 EUR/Min., (off peak))
E-Mail: hoyer@lidl.ie

MT Service Malta
Tel.: 80062230
E-Mail: hoyer@lidl.com.mt

CY Service Cyprus
Tel.: 8009 4409
E-Mail: hoyer@lidl.com.cy

IAN: 297459



Supplier

Please note that the following address is **no service address**. First contact the aforementioned Service Centre.

HOYER Handel GmbH
Tasköprüstraße 3
DE-22761 Hamburg
GERMANY

HOYER Handel GmbH

Tasköprüstraße 3

DE-22761 Hamburg

DEUTSCHLAND

Status of information:

01/2018 ID: SKBT 3 A1_18_V1.7

IAN 297459

