

AURIOL®



KITCHEN WALL CLOCK

GB IE

KITCHEN WALL CLOCK

Operation and safety notes

OWIM GmbH & Co. KG

Stiftsbergstraße 1
D-74167 Neckarsulm

Model No.: Z31957A/Z31957B
Version: 01/2014

IAN 96482



IAN 96482

GB IE

KITCHEN WALL CLOCK

● **Proper Use**

The device is intended for use indoors at normal room temperatures only. The device is not intended for commercial use.

● **Description of Parts**

- 1 Mounting hold
- 2 Setting dial
- 3 Small wheel
- 4 Battery compartment

● **Technical details**

Battery type: 1 x 1.5 V === AA



Safety

⚠ WARNING! Please read all safety information and instructions. Failure to comply with the safety information and instructions may result in, fire and/or severe injuries.



General Safety Information



⚠ WARNING! DANGER TO LIFE AND ACCIDENT HAZARD FOR TODDLERS AND SMALL CHILDREN! Never allow children to play unsupervised with the packaging material. There is a danger of suffocation from the packaging material. Children frequently underestimate the dangers.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- **⚠ WARNING! DANGER TO LIFE!** Batteries can be swallowed, which may represent a danger to life. If a battery has been swallowed, medical help is required immediately.
- Do not use the device if it is damaged.
- Repairs should only be carried out by specialist personnel.



Battery safety information

⚠ WARNING! DANGER TO LIFE!

- Batteries are not intended for children. If accidentally swallowed seek immediate medical attention.

⚠ Caution! EXPLOSION HAZARD!

- Never recharge non-rechargeable batteries and do not short-circuit and / or open any batteries.
- Never throw batteries into fire or water.
- Do not exert mechanical loads to batteries.

Risk of battery leaking

- In the event of a battery leak, immediately remove it from the device to prevent damage.
- Avoid contact with the skin, eyes and mucous membranes. In the event of contact with battery acid, thoroughly flush the affected area with clean water and seek immediate medical attention.

- Avoid extreme conditions and temperatures which may impact batteries, e.g. radiators, direct sunlight.
- Remove the battery from the device if it is not going to be used for extended periods.

Risk of property damage

- Use only the recommended battery type!
- When inserting the battery ensure the correct polarity!
- If necessary, clean the battery and device contacts before inserting the battery.
- Promptly remove a drained battery from the product.

● **Preparing the product for use**

- Remove the battery insulation strip from between the battery and the contact. Please see fig. B for replacing battery.

● **Operation**

Timer function (countdown)

- Turn the setting dial **2** one complete revolution clockwise.
- Turn it back counterclockwise and set it to the required number of minutes.

Note: The minute countdown starts immediately. When the set number of minutes runs out, the timer sounds an audible signal.

Setting the time

- To set the time, turn the small wheel **3** until the hands are in the desired positions (see fig. B).

● Cleaning and Maintenance

- The device should only be cleaned on the outside with a soft dry cloth.
- If the wall clock is not going to be used, remove the battery.

● Disposal



The packaging is made entirely of recyclable materials, which you may dispose of at local recycling facilities.

Contact your local refuse disposal authority for more details of how to dispose of your worn-out product.



To help protect the environment, please dispose of the product properly when it has reached the end of its useful life and not in the household waste. Information on collection points and their opening hours can be obtained from your local authority.

Faulty or used batteries must be recycled in accordance with Directive 2006/66/EC. Please return the batteries and /or the device to the available collection points.



Environmental damage through incorrect disposal of the batteries!

Batteries may not be disposed of with the usual domestic waste. They may contain toxic heavy metals and are subject to hazardous waste treatment rules and regulations. The chemical symbols for heavy metals are as follows: Cd = cadmium, Hg = mercury, Pb = lead. That is why you should dispose of used batteries at a local collection point.



