

 


 
 
## **FOOT SPA SFB 80 A1**

GB IE NI

 
### **FOOT SPA**

Operation and safety notes



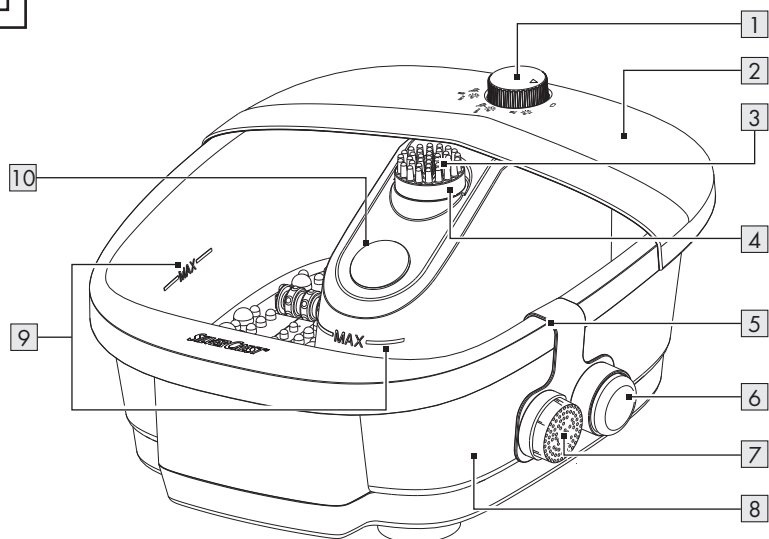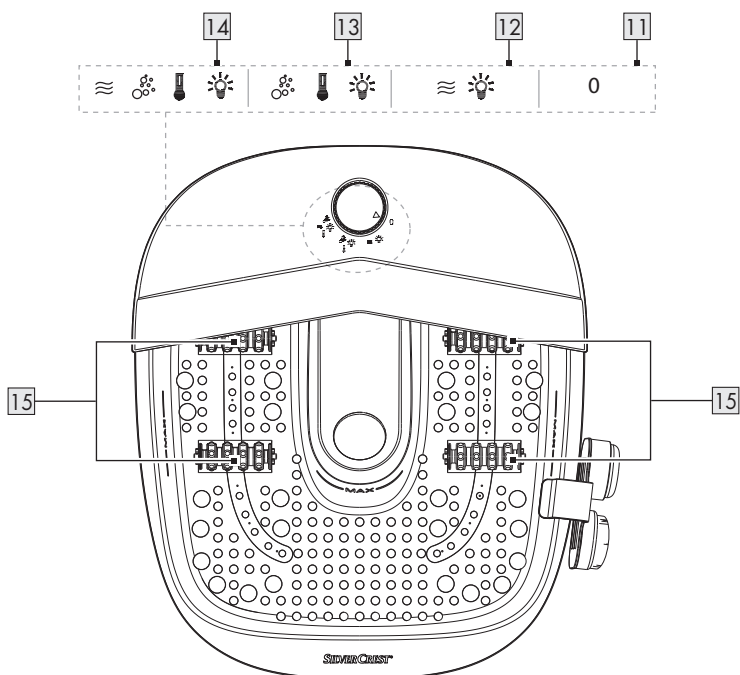**A****B**



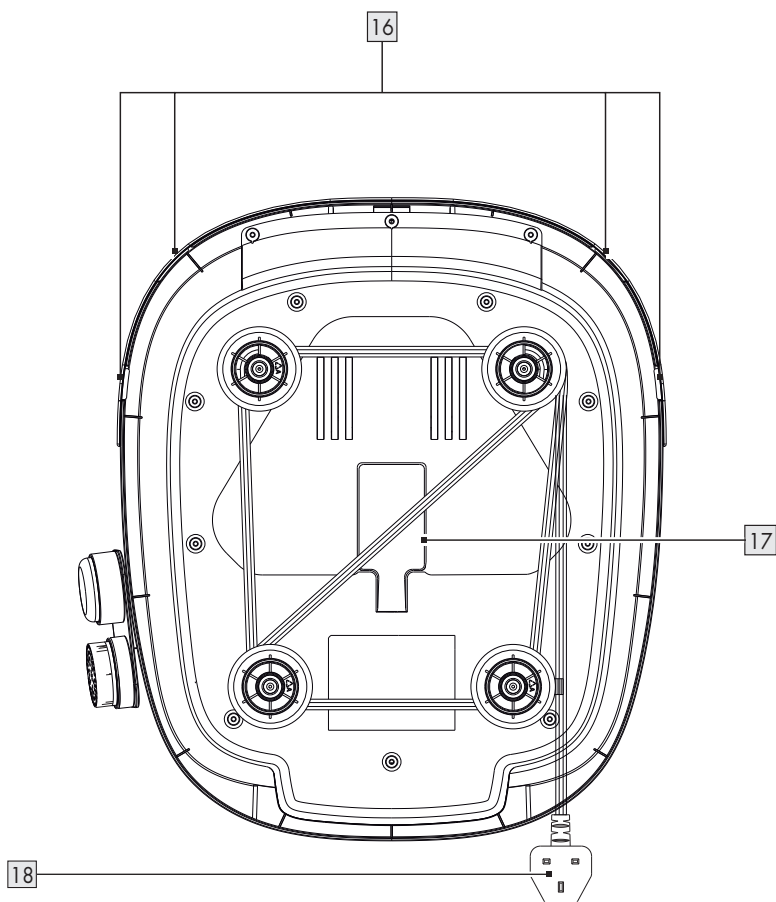


**C**



<b>Warnings and symbols used</b> .....	Page	6
<b>Introduction</b> .....	Page	6
Intended use .....	Page	6
Scope of delivery .....	Page	7
Description of parts .....	Page	7
Technical data .....	Page	7
<b>Safety instructions</b> .....	Page	7
<b>Before first use</b> .....	Page	10
<b>Preparation</b> .....	Page	10
<b>Operation</b> .....	Page	11
Switching the product on/off .....	Page	11
Choosing a mode .....	Page	11
Using the product without pedicure attachment .....	Page	11
Using the product with pedicure attachment .....	Page	11
After use .....	Page	11
<b>Cleaning and care</b> .....	Page	12
Storage .....	Page	12
<b>Disposal</b> .....	Page	12
<b>Warranty</b> .....	Page	13
Warranty claim procedure .....	Page	13
<b>Service</b> .....	Page	13

## Warnings and symbols used

The following warnings are used in this user manual and on the packaging:

	<b>DANGER!</b> This symbol in combination with the signal word "Danger" marks a high-risk hazard that if not prevented could result in death or serious injury.		Alternating current/voltage
		<b>Hz</b>	Hertz (supply frequency)
	<b>WARNING!</b> This symbol in combination with the signal word "Warning" marks a medium-risk hazard that if not prevented could result in death or serious injury.	<b>W</b>	Watts
	<b>NOTE:</b> This symbol in combination with "Note" provides additional useful information.		Symbol for a Protection Class II product
<b>UK CA</b>	UKCA mark indicates conformity with relevant Great Britain regulations applicable for this product (The UKCA mark logo is valid in Great Britain only).	<b>CE</b>	CE mark indicates conformity with relevant EU directives applicable for this product.

## FOOT SPA

### ● Introduction

We congratulate you on the purchase of your new product. You have chosen a high quality product. The instructions for use are part of the product. They contain important information concerning safety, use and disposal. Before using the product, please familiarise yourself with all of the safety information and instructions for use. Only use the product as described and for the specified applications. If you pass the product on to anyone else, please ensure that you also pass on all the documentation with it.

### ● Intended use

This product is designed for relaxing, caring for and refreshing tired feet.

The product is designed for household use; it is not suitable for medical or commercial use.

The manufacturer accepts no liability for damages caused by improper use.

## ● Scope of delivery

After unpacking the product, check if the delivery is complete and if all parts are in good condition. Remove all packing materials before use.

- 1 Foot spa
- 1 Massager (pedicure attachment)
- 1 Callus remover (pedicure attachment)
- 1 Brush (pedicure attachment)
- 1 Pedicure attachments storage
- 1 Instruction manual




## ● Description of parts

Before reading, unfold the page containing the illustrations and familiarise yourself with all the functions of the product.

### Figure A

- 1 Function button
- 2 Splash guard
- 3 Massager (pedicure attachment)
- 4 Pedicure attachment adapter
- 5 Pedicure attachments storage
- 6 Callus remover (pedicure attachment)
- 7 Brush (pedicure attachment)
- 8 Water container
- 9 **MAX** marking
- 10 **ON/OFF** indication light

### Figure B

- 11 **O** (Off)
- 12  Vibration massage
- 13  Bubble bath while keeping the water warm
- 14  Vibration massage and bubble bath while keeping the water warm
- 15 Massage rollers

### Figure C

- 16 Locking clips
- 17 Cord storage with holder for power plug
- 18 Supply cord with power plug

## ● Technical data

Rated voltage:	220-240 V~, 50-60 Hz
Rated power:	80 W



## Safety instructions

**BEFORE USING THE PRODUCT, PLEASE FAMILIARISE YOURSELF WITH ALL OF THE SAFETY INFORMATION AND INSTRUCTIONS FOR USE! WHEN PASSING THIS PRODUCT ON TO OTHERS, PLEASE ALSO INCLUDE ALL THE DOCUMENTS!**

In the case of damage resulting from non-compliance with these operating instructions the warranty claim becomes invalid! No liability is accepted for consequential damage! In the case of material damage or personal injury caused by incorrect handling or non-compliance with the safety instructions, no liability is accepted!


## Children and persons with limitations


### **WARNING! DANGER OF DEATH AND ACCIDENTS FOR TODDLERS AND CHILDREN!**


Never leave children unsupervised with the packaging material. The packaging material represents a danger of suffocation. Children frequently underestimate the dangers.


- This product can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the product.
- Cleaning and user maintenance shall not be performed by children unless supervised.


## Electrical safety

 **WARNING! Risk of electric shock!** Never attempt to repair the product yourself. In case of malfunction, repairs are to be conducted by qualified personnel only.


 **WARNING! Risk of electric shock!** Do not immerse the product's electrical components in water or other liquids. Never hold the electric components of the product under running water.

 **WARNING! Risk of electric shock!** If water leaks from the product, do not use the product any longer.

 **WARNING! Risk of injury!** Turn off the product and disconnect it from the power supply before cleaning and when the product is not in use.

 **WARNING! Risk of electric shock!** Do not use the product if it is damaged. Disconnect the product from the power supply and contact your retailer in the event of damage.



- If liquid gets into the product's electrical components or the product falls into the water, immediately disconnect the plug. Do not use the product any longer.
  - Before connecting the product to the power supply, check that the voltage rating corresponds with the power supply details shown on the product's rating label.
  - If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
  - Do not operate the product with wet hands. Do not touch the function button  or the power plug with wet hands.
  - No action is needed from users to shift the product between 50 and 60 Hz. The product adapts itself for both 50 and 60 Hz.
- ## Health
- This product is not a medical device.
- ⚠ DANGER! Risk of injury!**
- Only use the product on an even, stable, heat-resistant, clean, non-slippery and dry floor.
  - Never stand up with your feet inside the product.
- ⚠ WARNING!** Do not use this product and consult your doctors if you suffer from any of the following conditions:
- Skin inflammations
  - Wounds/swelling of the feet
  - Skin reddening
  - Diabetes
  - Eczema/psoriasis
  - Heart disease

- The product may have a hot surface during operation. Persons insensitive to heat must be careful when using the product.

**⚠ ATTENTION! Risk of product damage!** Do not add any additives, like oil, to the water container. After the water has evaporated, these additives may burn and damage the product.

### **Fire/burn hazard and heat**

**⚠ DANGER! Risk of fire!** Never leave the product unattended while it is plugged in.

- Never select the keep warm function if there is no water inside the water container [8].

### ● **Before first use**

- Remove all packaging materials.
- Clean the product and its accessories (see "Cleaning and care").

### ● **Preparation**

- Fill the water container [8] up to **MAX** [9] with water in the desired temperature.

### **⚠ ATTENTION! Risk of product damage!**

Do not fill in water at a temperature exceeding 42 °C. Always check the water temperature before placing your feet inside or switching on the product.

- Do not fill water above the **MAX** marking [9].
- Do not splash water on the function button [1], the **ON/OFF** indication light [10] or the base of the product.
- Do not remove the massage rollers [15] or splash guard [2], except when cleaning the product (see "Cleaning and care").

### **NOTES:**

- ① Only use clean water. Do not add any soap, bath salts or any other substances to the water container [8].
- ① Do not operate the product without having filled in water first.
- ① Before and after each use: Clean the product (see "Cleaning and care").
- Place the product on an even, stable, heat-resistant, clean, non-slippery and dry floor.
- Connect the supply cord with power plug [18] to a suitable socket outlet.

## ● Operation

### ● Switching the product on/off

- Switching the product on: Set the function button **1** to an operation mode (see "Choosing a mode").  
The **ON/OFF** indication light **10** switches on to confirm that the product is operating (Fig. A).
- Switching the product off: Set the function button **1** to **0** **11**. The **ON/OFF** indication light **10** switches off.

### ● Choosing a mode

- Set the function button **1** to the icons corresponding to the desired mode (Fig. B).

Mode	Function button	Function
<b>12</b> Mode 1		Vibration massage
<b>13</b> Mode 2		Bubble bath*
<b>14</b> Mode 3		Vibration massage and bubble bath*

\* While keeping the water warm

### ● Using the product without pedicure attachment

- Move your feet back and forth on the massage rollers **15** for a reflex zone massage.
- The recommended operation time is 15 minutes.

## ● Using the product with pedicure attachment

The product includes 3 pedicure attachments:

Pedicure attachment	Function
<b>3</b> Massager	Massage
<b>6</b> Callus remover	Removing hardened skin
<b>7</b> Brush	Massage

- Place the desired pedicure attachment **3** **6** **7** onto the pedicure attachment adapter **4**.
- Place the remaining 2 pedicure attachments onto the 2 slots on the pedicure attachments storage **5**.
- Rub your foot with gentle pressure on the pedicure attachment placed on the pedicure attachment adapter **4**.
- You may vary the application area on your foot by changing the position of your foot on the pedicure attachment.

### ● After use

- Switch the product off (see "Switching the product on/off").
- Disconnect the supply cord with power plug **18** from the power outlet.
- Empty the water container **8** into a large sink, bathtub or shower.

● **Cleaning and care**

**⚠ WARNING! Risk of electric shock!** Before cleaning the product: Always disconnect the supply cord with power plug **18** from the wall outlet. Never let the electrical components of the product get in contact with water!

**⚠ ATTENTION! Risk of product damage!** Do not splash water on the function button **1**, the **ON/OFF** indication light **10** or the base of the product.

- ① NOTE:** Clean the product after each use to avoid the accumulation of water, grease and other residues.
- Removing the massage rollers **15**: Pull the massage rollers upwards carefully.
  - Removing the splash guard **2**: Undo the locking clips **16** (Fig. C). Pull the splash guard upwards carefully.

Part	Cleaning method
Outer surface (foot spa)	Wipe down with a slightly moist cloth.
<b>6</b> * Callus remover	
<b>2</b> Splash guard	Rinse with clean water.
<b>3</b> * Massager	
<b>5</b> Pedicure attachment storage	
<b>7</b> * Brush	
<b>8</b> Water container	
<b>15</b> Massage rollers	
* Pedicure attachment	

● **Storage**

- Fix the supply cord with power plug **18** on the cord storage with holder for power plug **17** (Fig. C).
- Store the product in the original packaging when it is not in use.
- Store the product in a dry, secure location away from children.

● **Disposal**

The packaging is made entirely of recyclable materials, which you may dispose of at local recycling facilities.



Observe the marking of the packaging materials for waste separation, which are marked with abbreviations (a) and numbers (b) with following meaning: 1-7: plastics / 20-22: paper and fibreboard / 80-98: composite materials.



The product and packaging materials are recyclable, dispose of it separately for better waste treatment.  
The Triman logo is valid in France only.



Contact your local refuse disposal authority for more details of how to dispose of your worn-out product.



To help protect the environment, please dispose of the product properly when it has reached the end of its useful life and not in the household waste. Information on collection points and their opening hours can be obtained from your local authority.

## ● **Warranty**

The product has been manufactured to strict quality guidelines and meticulously examined before delivery. In the event of product defects you have legal rights against the retailer of this product. Your legal rights are not limited in any way by our warranty detailed below.

The warranty for this product is 3 years from the date of purchase. The warranty period begins on the date of purchase. Please keep the original sales receipt in a safe location. This document is required as your proof of purchase.

Should this product show any fault in materials or manufacture within 3 years from the date of purchase, we will repair or replace it – at our choice – free of charge to you. This warranty becomes void if the product has been damaged, or used or maintained improperly.

The warranty applies to defects in material or manufacture. This warranty does not cover product parts subject to normal wear, thus possibly considered consumables (e.g. batteries) or for damage to fragile parts, e.g. switches, rechargeable batteries or glass parts.

## ● **Warranty claim procedure**

To ensure quick processing of your case, please observe the following instructions:

Please have the till receipt and the item number (IAN 400503\_2107) available as proof of purchase.

You will find the item number on the rating plate, an engraving, on the front page of the instructions for use (bottom left), or as a sticker on the rear or bottom of the product.

If functional or other defects occur, please contact the service department listed either by telephone or by e-mail.

You can return a defective product to us free of charge to the service address that will be provided to you. Ensure that you enclose the proof of purchase (till receipt) and information about what the defect is and when it occurred.

## ● **Service**

### ⓊⓅ **Service Great Britain**

Tel.: 08000569216

E-Mail: [owim@lidl.co.uk](mailto:owim@lidl.co.uk)

### ⓈⓈ **Service Ireland**

Tel.: 1800 200736

### ⓃⓈ **Service Northern Ireland**

Tel.: 0800 0927852

E-Mail: [owim@lidl.ie](mailto:owim@lidl.ie)

CE  
UK  
CA

**OWIM GmbH & Co. KG**

Stiftsbergstraße 1  
74167 Neckarsulm  
GERMANY

Model No.: HG08655-BS

Version: 02/2022

IAN 400503\_2107

