



MILK FROTHER SMAS 500 C3

(GB) (IE) (NI)

MILK FROTHER

Operating instructions

(GR) (CY)

ΣΥΣΚΕΥΗ ΓΙΑ ΑΦΡΟΓΑΛΑ

Οδηγίες χειρισμού

 
(DE) (AT) (CH)

MILCHAUFSCHÄUMER

Bedienungsanleitung

IAN 384725_2107

(IE) (NI)
(GB) (CY)



GB IE NI

Before reading, unfold the page containing the illustrations and familiarise yourself with all functions of the device.

GR CY

Ξεδιπλώστε πριν την ανάγνωση την πλευρά με τις απεικονίσεις και εξοικειωθείτε κατόπιν με όλες τις λειτουργίες της συσκευής.

DE AT CH

Klappen Sie vor dem Lesen die Seite mit den Abbildungen aus und machen Sie sich anschließend mit allen Funktionen des Gerätes vertraut.

GB/IE/NI	Operating Instruction	Page	5
GR/CY	Οδηγίες χειρισμού	Σελίδα	35
DE/AT/CH	Bedienungsanleitung	Seite	69


A**B**

Table of contents

1.	Introduction	6
1.1.	Information about this user manual.....	6
1.2.	Explanation of symbols.....	6
2.	Proper use.....	9
3.	Safety instructions.....	10
4.	Appliance overview	18
5.	Package contents	19
6.	Technical specifications	20
7.	Declaration of conformity	21
8.	Before first use	21
9.	Using the milk frother	21
9.1.	Interrupting operation	24
9.2.	Ending operation	25
10.	Run-dry protection safety feature.....	25
11.	Cleaning the appliance	25
12.	Troubleshooting	27
13.	Storing/transporting.....	27
14.	Disposal	28
15.	Legal notice.....	28
15.1.	Information about trademarks	29
16.	MLAP GmbH Warranty.....	29
16.1.	Conditions of warranty	29
16.2.	Warranty period and legal claims for defects	29
16.3.	Scope of warranty.....	30
16.4.	Processing of warranty claims	30
17.	Service	31
17.1.	Supplier/Producer/Importer	32
18.	Privacy statement.....	33

1. Introduction

1.1. Information about this user manual

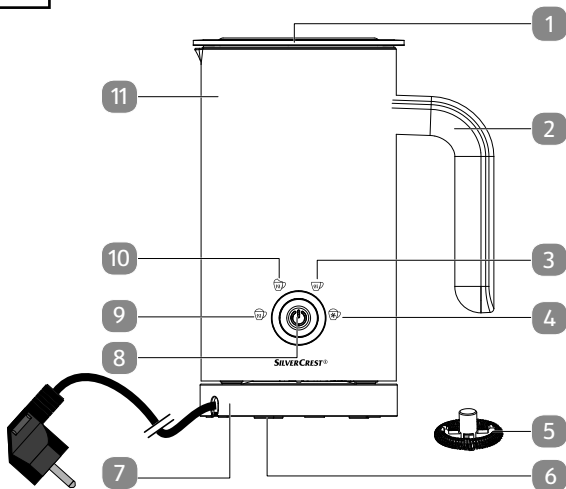

Congratulations on purchasing your new appliance. You have chosen a high-quality product. The user manual is an integral part of this product. It contains important safety information and instructions for use and disposal. Before using the product, please familiarise yourself with all operating and safety instructions. Only use the product as described and for the specified applications. Keep this user manual in a safe place. If you give this product to someone else, ensure that you also hand over all the documents.

1.2. Explanation of symbols



DANGER!

Warning: risk of fatal injury!

- Follow the instructions to avoid situations that will lead to fatal or serious injuries.



WARNING!

Warning: risk of possible fatal injury and/or serious irreversible injuries!

- Follow the instructions to avoid situations that may lead to fatal or serious injuries.



CAUTION!

Warning: risk of minor and/or moderate injuries!

- Follow the instructions to avoid situations that may lead to moderate or minor injuries.



WARNING!

Warning: risk of electric shock!



NOTICE!

Follow the instructions to avoid property damage.

- Follow the instructions to avoid situations that may damage the appliance.



Notes regarding assembly or operation



Follow the instructions in the user manual!

- Instruction to be followed to prevent hazards
 - Bullet point/information on steps during operation
 - ▶ Instruction to be carried out



Protective earthing symbol (for protection class I)

Electrical appliances in protection class I are electrical appliances that permanently have at least basic insulation and either have a plug with earth contact or a fixed power cable with protective earth.



Declaration of Conformity (see “Declaration of Conformity” section): Products that feature this symbol meet the requirements of the EU directives.



UK conformity symbol: Products that have this symbol meet the requirements of UK product safety directives.



Symbol used in the EU to indicate materials that come into contact with food, such as packaging or appliance surfaces.



High-quality, non-stick coating from ILAG®



This product is not dishwasher safe.



Do not immerse it in water or other liquids.



Packaging material label regarding waste separation:
Label includes abbreviations (a) and numbers (b) with the following meaning: 1–7: plastics/20–22: paper and cardboard/80–98: composite materials.



Dispose of packaging in compliance with environmental regulations (see section "Disposal").



Dispose of packaging in compliance with environmental regulations (see section "Disposal").



Dispose of the appliance in compliance with environmental regulations (see section "Disposal").



Packaging marked with this symbol is produced in a particularly resource-efficient and environmentally friendly way.



The symbol indicates the manufacturer.

2. Proper use

This appliance is solely intended for making warm or cold milk froth, warming milk and making milk-based beverages.

This appliance is designed for use in private households and similar household applications, such as

- in kitchens for staff in retail outlets, offices and other commercial areas
- on agricultural estates
- by customers in hotels, motels and other accommodation facilities
- in bed-and-breakfast establishments.

Please note that we shall not be liable in cases of improper use:

- Do not modify the appliance without our consent and do not use any auxiliary equipment that we have not approved or supplied.
- Only use replacement parts or accessories that we have supplied or approved.
- Comply with all the information in this user manual, especially the safety instructions. Any other use is considered improper and can cause personal injury or property damage.

3. Safety instructions

IMPORTANT SAFETY INSTRUCTIONS – READ CAREFULLY AND KEEP FOR FUTURE REFERENCE!



WARNING!

Risk of injury!

Risk of injury due to improper use.

- Keep the appliance and its accessories out of the reach of children.
- This appliance can be used by children aged 8 years and above, by people with reduced physical, sensory or mental capabilities, or people who lack experience and/or knowledge if proper supervision is provided or if these people have been instructed in how to use the appliance safely and have fully understood the possible dangers.
- Children must not be allowed to play with the appliance.
- Cleaning and user maintenance must not be carried out by children unless they are aged 8 or over and are supervised.

- Do not allow children younger than 8 years old near the appliance and its power cable.



DANGER!

Risk of choking and suffocation!

There is a risk of choking and suffocation due to swallowing or inhaling small parts or plastic wrap.

- Keep all packaging materials used (bag, pieces of polystyrene etc.) out of the reach of children.



WARNING!

Risk of electric shock caused by moisture!

The base plate must not be immersed in water or other liquids, or held under running water, because this could cause an electric shock.

- Always unplug the appliance plug from the mains power socket:
 - when you are cleaning the appliance
 - when the appliance/base plate is damp or wet
 - when the appliance is unattended

SILVERCREST®

- during thunderstorms
- if you are no longer using the appliance.
- Always hold the plug to pull it out and never pull the cable.
- Never expose the base plate to water drops or water spray. Never immerse the appliance/ base plate in water or other liquids!
-
- Please also observe the information on cleaning on page 25.
- Do not use the appliance outdoors.
- Before cleaning the milk container, always remove the container from the base plate.
- Do not expose the appliance to extreme conditions. Avoid:
 - high humidity or wet conditions
 - extremely high or low temperatures
 - direct sunlight
 - naked flames.

**WARNING!****Risk of electric shock!**

There is a risk of electric shock due to live parts.

- Only connect the appliance to a properly installed power socket. The mains voltage must match the technical specifications for the appliance.
- The power socket must be easily accessible so that you can unplug the appliance from the mains quickly if necessary.
- Check the appliance and the mains cable for damage before using the appliance for the first time and after each use.
- Do not use the appliance if you notice that it, or its mains cable, is damaged.
- Contact our Service Centre without delay if the appliance has been damaged during transport.
- Do not, under any circumstances, make any unauthorised modifications to the appliance or try to open a component and/or repair it yourself.

- If there is damage to the mains connection cable on this appliance, it must be replaced by the manufacturer, its customer service department or another suitably qualified person. This is necessary to avoid hazards.
- Ensure that the mains cable does not come into contact with hot appliance parts or other heat sources.
- Never open the housing.
- To completely disconnect the appliance from the power supply, the mains plug must be removed from the earthed mains socket.
- Only operate this appliance with the base plate supplied.



CAUTION!

Risk of injury!

The touchable surfaces on the appliance and the container become extremely hot when the appliance is in use. There is a risk of burns.

- Do not touch the housing.
- During operation, touch the appliance only by the milk container handle and the mode

selection button.

- Steam escapes during use. Do not reach into this steam.
- Do not move the appliance when it is in use.
- Never reach inside the appliance when it is in use.
- The heating element remains hot for some time after the appliance is switched off. Ensure that the inside of the appliance is not touched.



CAUTION!

Risk of injury!

Injuries may result from using the appliance carelessly.

- Never leave the appliance unattended when it is in use.
- Ensure the mains cable does not become a tripping hazard – do not use an extension cable.
- Place the appliance on a stable, level surface.
- Never place the appliance on the edge of a table – it could tip over and fall.
- Never use the appliance without milk. Never use the appliance if the lid is not put on properly.

- Do not exceed the **MAX** fill level. Boiling liquid could spurt out. Do not open the lid when the appliance is in use.



WARNING! **Risk of fire!**

There is a risk of fire because the appliance surfaces become extremely hot when it is in use.

- Ensure that the appliance does not come into contact with any other objects during use. Allow sufficient clearance in all directions and above. Above all, do not set up the appliance near easily flammable materials (curtains, drapes, paper etc.).
- Do not cover the appliance.
- Do not place any objects on the appliance.
- Do not place the appliance on surfaces that can become hot (e.g. on hotplates).
- Do not operate the appliance with an external timer or a separate remote control system.
- Leave a little space between this appliance and other appliances or the wall to allow air

to circulate freely. Do not cover the appliance when it is in use.






**NOTICE!****Possible damage to the appliance!**

Using the appliance in a way that was not intended may damage it.



- Do not kink the mains cable or wrap it around the appliance. Unwind the cable fully when using the appliance. Do not kink or crush the mains cable.
- Do not use the milk container in the microwave.
- Only use the supplied milk container for operation.

4. Appliance overview

See **Fig. A**

- 1) Lid
- 2) Handle
- 3) Operating light : heated milk with a little froth
- 4) Operating light : cold frothing
- 5) Whisk
- 6) Non-slip feet
- 7) Base plate with mains cable and mains plug
- 8) : mode selection button with operating LED
- 9) Operating light : warm, creamy froth
- 10) Operating light : warm, dense froth
- 11) Milk container with spout

See **Fig. B**

- 12) MAX marking : up to max. 150 ml for preparing milk froth
- 13) MAX marking : up to max. 300 ml for preparing warm milk and milk-based beverages

5. Package contents



DANGER!

Risk of choking and suffocation!

There is a risk of choking and suffocation due to swallowing or inhaling small parts or plastic wrap.

- Keep the plastic packaging out of the reach of children.

- ▶ Remove the product from the packaging and remove all packaging materials.
- ▶ Please check your purchase to ensure that all items are included and in perfect condition. If anything is missing or damaged, contact us within 14 days of purchase.

The following items are supplied with your product:

- Milk frother
- Whisk
- User manual

6. Technical specifications

Supplier's name or trademark:	SilverCrest®
Supplier's address:	MLAP GmbH Meitnerstr. 9 70563 Stuttgart GERMANY
Model identifier:	SMAS 500 C3
Power supply:	220–240 V~ 50 Hz
Rated power:	500 W
Heating temperature:	60–70°C
Filling volume of container:	Min. 75 ml to max. 150 ml for preparing milk froth (MAX marking ☉) Min. 75 ml to max. 300 ml for preparing warm milk and milk-based beverages (MAX marking ☉)
Dimensions	
Diameter	Approx. 108 mm (approx. 155 mm incl. handle)
Height	Approx. 195 mm (incl. base plate)

7. Declaration of conformity

CE The manufacturer hereby declares that this appliance complies with the fundamental requirements and the other relevant provisions of:

- EMC Directive 2014/30/EU
- Low Voltage Directive 2014/35/EU
- RoHS Directive 2011/65/EU

**UK
CA** The manufacturer hereby declares that this appliance complies with the requirements of UK product safety directives.

8. Before first use

- ▶ Before using for the first time, clean the milk container (11), the lid (1) and the whisk (5) with water and conventional washing-up liquid.
- ▶ Rinse the appliance with clean water.
- ▶ Dry the parts thoroughly.
- ▶ Connect the appliance to a mains socket.
- ▶ Place the milk container (11) onto the base plate (7). You can place the appliance facing any direction using the centre contact.

9. Using the milk frother



CAUTION!

Risk of injury!

There is a risk of injury due to burns caused by hot surfaces.

- Always hold the milk container (11) by the handle (2).



NOTICE!

Risk of damage!

Risk of damage to the appliance due to improper use of the appliance

- The whisk (5) in the milk container (11) must be fully covered with milk. The appliance may overheat if there is too little milk.

This appliance is suitable for preparing warm or cold milk froth, warming milk and making milk-based beverages.

Use the whisk (5) for all applications to prevent the milk from burning.













- ▶ Place the whisk (5) onto the pin in the milk container (11).
- ▶ Fill the milk container (11) as specified in the following table.








We recommend using cooled semi-skimmed (1.5% fat content) long-life milk. UHT milk and fresh milk with a higher fat content are also suitable, but the consistency of the milk froth is dependent on the type of milk used.

When frothing milk, we recommend a milk quantity of 75–150 ml.

- ▶ Place the lid (1) onto the milk container (11). Note the position of the spout.

 Press the button (8)	Max. fill level (in ml)	Display/ note
Press once: warm, creamy froth	Min. 75 ml milk (MIN marking), max. 150 ml (MAX marking)  (12))	<ol style="list-style-type: none"> 1) Operating light  (9) lights up red continuously. 2) The operating light  (9) flashes at the end of the programme. 3) The process is complete.
Press twice: warm, dense froth		<ol style="list-style-type: none"> 1) Operating light  (10) lights up red. 2) The operating light  (10) flashes at the end of the programme. 3) The process is complete.
Press three times: heated milk with a little froth	Min. 75 ml milk (MIN marking), max. 300 ml (MAX marking)  (13))	<ol style="list-style-type: none"> 1) Operating light  (3) lights up red. 2) The operating light  (3) flashes at the end of the programme. 3) The process is complete.
Press four times: cold frothing	Min. 75 ml milk, max. 150 ml (MAX marking)  (12))	<ol style="list-style-type: none"> 1) Operating light  (4) lights up blue. 2) The operating light  (4) flashes at the end of the programme. 3) The process is complete.

 Press the button (8)	Max. fill level (in ml)	Display/ note
Press four times: Making milk-based beverages	Min. 75 ml milk (MIN marking), max. 300 ml (MAX marking)  (13))	<ul style="list-style-type: none"> ▶ To prepare milk-based beverages, add cocoa, syrup or something similar to cold milk. 1) Operating light  (4) lights up blue. 2) The operating light  (4) flashes at the end of the programme. 3) The process is complete.

- ▶ Press the mode selection button  (8) once or several times until the operating light (3, 4, 9 or 10) for the respective function lights up

The selected programme starts after 2 seconds. At the end of the programme, the indicator flashes and turns off when the appliance switches off automatically.

- ▶ Remove the lid (1) and pour the milk froth/drink into a suitable container once the programme is complete. Clean the milk container (11), the whisk (5) and the lid (1) immediately after use and as soon as the parts have cooled down to prevent milk from becoming dried on.

9.1. Interrupting operation

To interrupt operation, remove the milk container (11) from the base plate (7) or press and hold the mode selection button (8) until the appliance switches off.

9.2. Ending operation

- ▶ Unplug the mains plug on the base plate (7) and clean the appliance as described in section "11. Cleaning the appliance" on page 25.

10. Run-dry protection safety feature

The appliance is equipped with run-dry protection, which triggers when the appliance is about to overheat as a result of being filled with too little liquid. In this case, the appliance switches off automatically and all LEDs light up.

Allow the appliance to cool down before using it again and fill the milk container (11) with at least 75 ml milk (MIN marking), but no more than 150 ml (MAX marking ☉) or 300 ml (MAX marking ☉).

11. Cleaning the appliance



WARNING!

Risk of electric shock!

There is a risk of electric shock due to live parts.

- Never immerse the base plate (7) or the appliance in water or other liquids!
- Never handle the base plate (7) with hard objects.



NOTICE!

Risk of damage!

Risk of damage to the appliance if handled incorrectly.

- Do not use any harsh or abrasive cleaning agents or objects to clean the container and the housing because these items could damage surfaces.
 - The base plate (7) and appliance are not dishwasher safe.
-
- ▶ Unplug the mains plug on the base plate (7) from the socket before cleaning the appliance.
 - ▶ Allow the milk container (11) to cool down before cleaning.
 - ▶ Empty the milk container (11).
 - ▶ Remove the whisk (5).
 - ▶ Clean the whisk (5) under running water.
 - ▶ Rinse the milk container (11) with warm water and washing-up liquid. Clean it with a soft cloth to avoid damaging the non-stick coating.
 - ▶ Remove the lid seal by feeling around the recess and pulling it off.
 - ▶ Clean the lid (1) and lid seal with warm water and washing-up liquid.
 - ▶ Rinse all appliance parts with clean water.
 - ▶ Dry the milk container (11), lid (1) and lid seal using a soft cloth to avoid scratching the surface.
 - ▶ Place the lid seal back onto the edge of the lid (1).
 - ▶ Wipe the surface of the appliance and the base plate (7) with soft cloth dampened with a little water.

12. Troubleshooting

The appliance left our warehouse in perfect condition. If you do, however, discover a problem, see if you can solve it by using the solutions offered in the following table. If you do not succeed, contact our customer service department.

Problem	Possible cause	Troubleshooting
The appliance is not working.	The mains plug (7) is not plugged into a power socket.	▶ Connect the appliance to a mains socket. The mains voltage must match the technical specifications for the appliance.
The process is interrupted.	The milk container (11) is empty. The run-dry protection has been triggered.	▶ Allow the milk container (11) to cool down. Then rinse it, refill it with a sufficient amount of milk and start the process again.
The milk is not frothed.	No attachment is mounted.	▶ Use the whisk (5).

13. Storing/transporting

- ▶ When you are not using the appliance, unplug the mains plug (7), clean the appliance and store the appliance in a dry, dust-free and frost-free environment that is not exposed to direct sunlight.
- ▶ Do not store the appliance within the reach of children.
- ▶ To avoid damage during transport, we recommend that you use the original packaging.

14. Disposal

PACKAGING

Your appliance has been packaged to protect it from damage in transit. The packaging is made of materials that can be recycled in an environmentally friendly manner.



APPLIANCE

Do not dispose of old appliances in normal household waste. In accordance with Directive 2012/19/EU, the appliance must be properly disposed of at the end of its service life.

This involves separating the materials in the appliance for the purpose of recycling and minimising the environmental impact.

Take old appliances to an electrical scrap collection point or a recycling centre.

Contact your local waste disposal company or your local authority for more information on this subject.

15. Legal notice

Copyright © 2022

All rights reserved.

This user manual is protected by copyright.

Mechanical, electronic and any other forms of reproduction are prohibited without the written permission of the manufacturer.

Copyright is owned by the company:

MLAP GmbH
Meitnerstr. 9
70563 Stuttgart
GERMANY

15.1. Information about trademarks

SilverCrest® is a registered trademark of Lidl Stiftung & Co. KG, 74167 Neckarsulm, Germany.

All other names and products are trademarks or registered trademarks of their particular owners.

16. MLAP GmbH Warranty

Dear customer,

The warranty on this product is 3 years from the date of purchase. In the event of defects in this product, you have legal rights against the product vendor. These legal rights are in no way limited by the warranty described below.

16.1. Conditions of warranty

The warranty period begins on the date of purchase. Please take care to keep the original purchase receipt. This document will serve as a proof of purchase.

If, within three years of the date of purchase of this product, any defect in material or manufacture should become evident, the product will – as we choose – be repaired free of charge or replaced. This warranty is subject to presentation, within the three-year term, of the defective product and the proof of purchase (receipt) and a brief, written description of what constitutes the defect and when it became evident.

If the defect is covered by our warranty, you will receive back the repaired product or a new replacement. Repair or exchange of the product does not lead to a renewed warranty period.

16.2. Warranty period and legal claims for defects

The warranty period is not prolonged by the above fulfilment. This also applies for replaced and repaired parts. Any damage or defects present at the time of purchase must be notified immediately after unpack-

ing. Repairs that are carried out after the expiration of the warranty period are subject to a charge.

16.3. Scope of warranty

The product is manufactured in accordance with strict quality guidelines and thoroughly tested before dispatch.

The warranty applies for defects in materials or manufacture. This warranty does not extend to product parts that are subject to normal wear and can therefore be regarded as wearing parts or to damage to fragile parts, e.g. switches, batteries or parts made of glass.

This warranty is void if the product has been damaged or not properly used or serviced. For proper use of the product, exact compliance with all instructions listed in the user manual is required. It is essential to avoid procedures and use for purposes against which the user manual advises or warns.

The product is intended for private use only and not for industrial/commercial use. Improper handling and usage not in accordance with the intended purpose, use of force and any interventions that are not carried out by our authorised service centre will render the warranty null and void.

16.4. Processing of warranty claims

For speedy processing of your request, please observe the following instructions:

- For all enquiries, please keep the receipt and the article number IAN 384725_2107 to hand as proof of purchase.
- The article number is to be found on the type plate, an engraving, on the title page of your instructions (bottom left) or on an adhesive label on the rear or underside.
- If functional or other defects occur, first contact the service department named below by telephone or via our contact form.

17. Service



You can download this user manual and many other manuals, product videos and installation software from www.lidl-service.com.

Scan this QR code to be directed straight to the Lidl Service website (www.lidl-service.com) where you can open your user manual by entering the article number IAN 384725_2107.

GB

Service United Kingdom

Hotline

☎ +44 20 34811602

⊕ Mon - Fri: 09:00 - 17:00

Please use the contact form at www.mlapp.info/contact

IE

Service Ireland

Hotline

☎ +353 1 6533859

⊕ Mon - Fri: 09:00 - 17:00

Please use the contact form at www.mlapp.info/contact

NI

Service North Ireland

Hotline

☎ +44 28 95922074

⊕ Mon - Fri: 09:00 - 17:00

Please use the contact form at www.mlapp.info/contact



Service Cyprus

Hotline

☎ +357 2 2008081

🕒 Mon - Fri: 09:00 - 17:00

Please use the contact form at www.mlap.info/contact

IAN 384725_2107

17.1. Supplier/Producer/Importer

Please note that you cannot use the address below for returns. Please contact the Service Centre mentioned above.



MLAP GmbH
Meitnerstr. 9
70563 Stuttgart
Germany

Importer for GB market by:
Lidl Great Britain Ltd · Lidl House
14 Kingston Road · Surbiton · KT5 9NU
GREAT BRITAIN

18. Privacy statement

Dear Customer,

We wish to inform you that we, MLAP GmbH, Meitnerstr. 9, 70563 Stuttgart, Germany, process your personal data as a data controller.

For matters regarding data protection, we are supported by our company data protection officer who can be contacted at MLAP GmbH, Datenschutz, Meitnerstr. 9, 70563 Stuttgart, Germany, datenschutz@mlap.info. We process your data for the purpose of warranty processing and associated processes (e.g. repairs) and rely on the sales contract concluded with us when processing your data.

Your data will be provided to repair service providers contracted by us for the purpose of warranty processing and associated processes (e.g. repairs). We generally store your personal data for a period of three years in order to fulfil your legal warranty rights.

You have the right to be informed of the personal data concerned as well as the right to rectification, erasure and restriction of processing, the right to object to processing and the right to data portability.

In the case of the right to be informed and the right to erasure, restrictions apply according to Sections 34 and 35 of the BDSG (Federal Data Protection Act) (Art. 23 of the GDPR). In addition, there is a right of appeal to a competent data protection supervisory authority (Article 77 of the GDPR in conjunction with Section 19 of the BDSG). For MLAP, this is the state official for data protection and freedom of information Baden-Württemberg, PO box 10 29 32, 70025 Stuttgart, Germany. www.baden-wuerttemberg.datenschutz.de.

The processing of your data is necessary for warranty processing: it is not possible to process the warranty without the provision of the required data.



MLAP GmbH

Meitnerstr. 9
70563 Stuttgart
GERMANY

Model no.: SMAS 500 C3
Version: V1.0

Last Information Update · Έκδοση των πληροφοριών · Stand der Informationen:
Update: 01/2022 · Ident.-No.: 50069431-10818-24/2022-GB-IE-NI-CY

IAN 384725_2107

