

GB Concise Information


Carefully read the safety instructions in the operating manual before using the appliance for the first time!

Defrosting, cooking and grill functions

To defrost, press button Defrost **8**. Using the control dial **11** enter in the weight of the foodstuff to be defrosted. You can enter in a weight of between 100 g and 1800 g. Press button Start/Quickstart **11**. The time is calculated by the microwave. The food should be turned after about 1/2 of the cooking time.

For quick cooking press the button Start/Quickstart **11**. The microwave runs with a power of 800 W for 30 seconds. If need be, you can increase the cooking time in increments of 30 seconds by pressing the button Start/Quickstart **11** (up to max. of 12 minutes).

To grill, press the button Grill **6**. Using the control dial **11** set the required cooking time. Press button Start/Quickstart **11** to start the grill function.

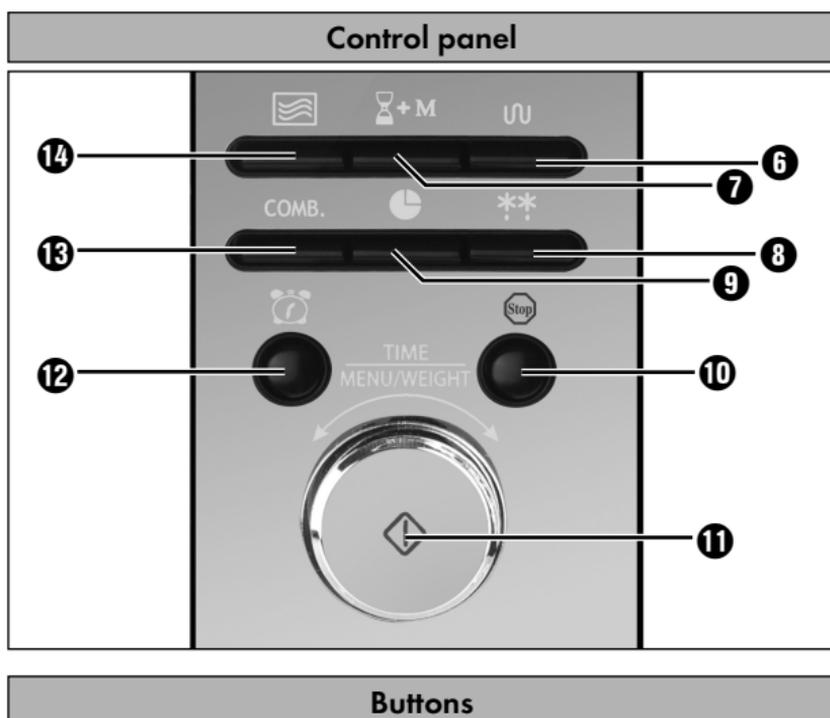

Buttons

- | | |
|-------------------------|---|
| 6 Grill button | 11 Control dial / Start / Quickstart |
| 7 Preset button | |
| 8 Defrost button | 12 Kitchen timer button |
| 9 Time button | 13 Combination button |
| 10 Stop button | 14 Operation button |

DE Kurzinformation

Lesen Sie vor Inbetriebnahme des Gerätes die Sicherheitshinweise in der Bedienungsanleitung aufmerksam durch!


Auftauen, Garen und Grillen

Zum Auftauen drücken Sie die Taste Auftauen **8**. Wählen Sie mit Hilfe des Drehreglers **11** das Gewicht der aufzutauenden Speise. Sie können ein Gewicht zwischen 100 g und 1800 g einstellen. Drücken Sie die Taste Start/Schnellstart **11**. Die Zeit wird von der Mikrowelle vorgegeben. Die Speise sollte nach 1/2 der Zeit gewendet werden.

Zum schnellen Garen drücken Sie auf die Taste Start/Schnellstart **11**. Die Mikrowelle läuft mit 800 Watt Leistung für 30 Sekunden. Bei Bedarf können Sie die Zeit durch Drücken der Taste Start/Schnellstart **11** um je 30 Sekunden erhöhen (max. bis 12 Minuten).

Zum Grillen drücken Sie die Taste Grill **6**. Stellen Sie mit dem Drehregler **11** die gewünschte Garzeit ein. Drücken Sie zum Starten der Grill-Funktion die Taste Start/Schnellstart **11**.

Bedienfeld

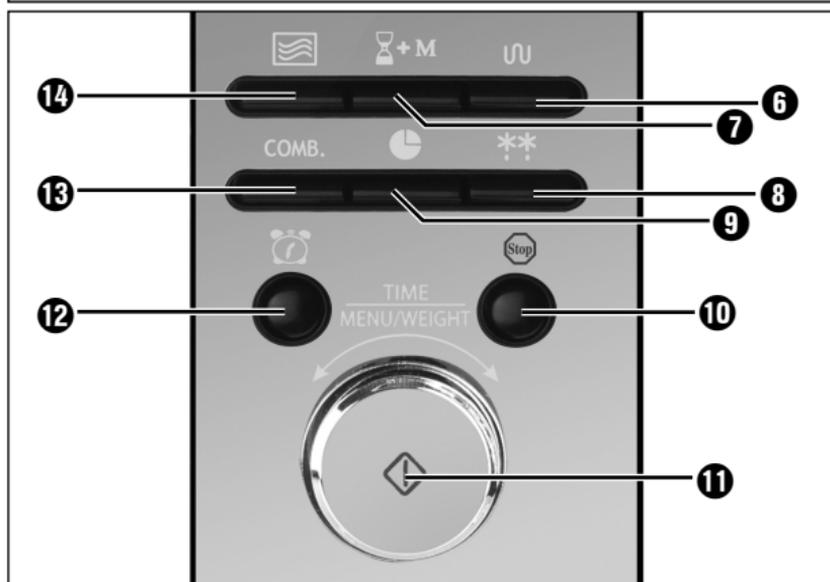

Tasten

- | | |
|-----------------------------------|---|
| 6 Taste Grill | 11 Drehregler / Start / Schnellstart |
| 7 Taste Startzeit (Preset) | 12 Taste Küchentimer |
| 8 Taste Auftauen | 13 Taste Kombination |
| 9 Taste Uhr | 14 Taste Leistung |
| 10 Taste Stop | |